

Enclosures - letter from Dr. Gerald McEwen, CTFA, on June 8, 2005 in response to request for additional information/public comments on Toxicological Program (70 Federal Register 23877): Imidazolidinyl urea:

Salmonella/Mammalian-Microsome Plate Incorporation Mutagenicity Assay (Ames Test). Test Article AT0214 (Germall II - Diazolidinyl Urea). Microbiological Associates Study No. T2039.501. 42 pages.

Salmonella/Mammalian-Microsome Plate Incorporation Mutagenicity Assay (Ames Test). Test Article AT0214, Lot No. GT115. Diazolidinyl Urea (Germall II) RI 1157. Microbiological Associates Study No. T2039.501008. 35 pages.

Germall II. Mouse Micronucleus Test for Chromosomal Aberrations. PH 309-SU-001-86. 67 pages.

SALMONELLA/MAMMALIAN-MICROSOME PLATE
INCORPORATION MUTAGENICITY ASSAY
(AMES TEST)

TEST ARTICLE AT0214
LOT NO. GT115

Diazolidinyl Urea (Germall II) RI 1157



SALMONELLA/MAMMALIAN-MICROSOME PLATE INCORPORATION
MUTAGENICITY ASSAY (AMES TEST)

Sponsor:

Testing Facility: 1530 East Jefferson Street
Rockville, Maryland 20852

Study No.: T2039.501008

Test Article I.D.: AT0214

Test Article Lot No.: GT115

Test Article Description: White Powder

Storage Conditions: Room Temperature with Desiccation;
Protected from Light

Date Received: 6/7/83

Date Study Started: 8/11/83

Date Study Completed: 9/15/83

Report Date: 9/15/83

Study Coordinator:

Study Director: Steve R. Haworth, Ph.D.
Microbiological Associates

Steve R. Haworth 9/15/83
Steve R. Haworth, Ph.D. Date
Study Director

Jeanene K. Burke 9/15/83
Jeanene K. Burke Date
Group Leader

Robin J. Plunkett 9/15/83
Robin J. Plunkett Date
Biologist

Timothy E. Lawlor 9-15-83
Timothy E. Lawlor Date
Alternate Study Director

Sheila M. Olewine 9/15/83
Sheila M. Olewine Date
Biologist

Linda M. Coyle 9/15/83
Linda M. Coyle Date
Biologist

QUALITY ASSURANCE STATEMENT

Study Title: Salmonella/Mammalian-Microsome Plate Incorporation
Mutagenicity Assay (Ames Test)

Study Number: T2039.501008

Study Director: S. Haworth, Ph.D.

Initiation Date: August 11, 1983

Review Completed Date: September 15, 1983

This study has been divided into a series of phases. Using a random sampling approach, Quality Assurance monitors each of these phases over a series of studies. Procedures, documentation, equipment, etc. are examined in order to assure that the study is performed in accordance with the Good Laboratory Practices regulations and to assure that the study is conducted according to the protocol.

The following are the inspection dates, phases inspected, and report dates of QA inspections of this study.

<u>DATE OF</u> <u>INSPECTION</u>	<u>PHASE INSPECTED</u>	<u>REPORT SUBMITTED TO</u> <u>STUDY DIRECTOR</u>	<u>MANAGEMENT</u>
8/11/83	Protocol review	8/11/83	8/11/83
8/17/83	Preparation of S-9 mixes	8/17/83	8/18/83
9/15/83	Final report	9/15/83	9/15/83

This report describes the methods and procedures used in the study and the reported results accurately reflect the raw data of the study.

Nona S. Karten 9/15/83
Nona S. Karten Date
Associate Director RA/QA

Introduction

test article AT0214, Lot No. GT115 was originally received on June 7, 1983, for testing in the Salmonella/mammalian-microsome mutagenicity assay (Ames test) using five tester strains, TA98, TA100, TA1535, TA1537 and TA1538, both with and without activation by Aroclor induced rat liver microsomes.

In this original Ames study, the test article was shown to cause slight increases in TA98 and TA1537 revertants per plate in the presence of 10% rat S-9 homogenate per ml of S-9 mix. Since the increase in revertants appeared to be S-9 dependent, a study was designed to investigate 1) the effect of increasing and decreasing the S-9 concentrations on revertant recovery, and 2) the effect of S-9 prepared from the livers of Aroclor 1254 induced hamsters compared to S-9 prepared from the livers of Aroclor 1254 induced rats.

The study employed tester strains TA98 and TA1537 and the following concentrations of S-9 homogenate per ml of S-9 mix for both hamster and rat S-9 preparations:

5% S-9 homogenate = .05 ml S-9 homogenate/ml of S-9 mix
10% S-9 homogenate = .10 ml S-9 homogenate/ml of S-9 mix
30% S-9 homogenate = .30 ml S-9 homogenate/ml of S-9 mix

Conclusions

The results of the specially designed Salmonella/mammalian-microsome mutagenicity assay indicate that under the conditions of this study, test article AT0214, Lot No. GT115 did not cause a positive response on either of the tester strains under any of the experimental conditions investigated.

The increases in TA98 and TA1537 revertants per plate were similar to those obtained in previous studies. Additionally, neither the species from which the S-9 was derived nor the

concentration of the homogenate used in the S-9 mix appeared to greatly influence the magnitude of the observed revertant increases.

MATERIALS AND METHODS¹

Media Preparation

Top Agar for Selection of Histidine Revertants: Minimal top agar was prepared with 8 g/liter Difco Bacto Agar and 5 g/liter NaCl. After autoclaving, the molten agar was distributed in 100 ml aliquots into sterile bottles and stored at room temperature. Immediately before its use in the mutagenicity assay, the top agar was melted and supplemented with 10 ml/100 ml agar of a sterile solution which contained 0.5 mM L-histidine and 0.5 mM D-biotin. Twenty-five ml of sterile deionized water was added per 100 ml top agar when it was used in assays without metabolic activation. This ensured that final top agar and amino acid supplement concentrations were the same on plates with or without metabolic activation.

Top Agar for Viable Count Determination: Minimal top agar as described above was supplemented with 35 ml/100 ml agar of a sterile solution which contained 1.4 mM L-histidine and 0.12 mM D-biotin.

Minimal Bottom Agar: Bottom agar was Vogel-Bonner minimal medium E.²

Nutrient Broth: Nutrient broth used for growing overnight cultures of the tester strains contained 25 g per liter of Nutrient Broth No. 2 (Oxoid).

Nutrient Bottom Agar: Nutrient bottom agar was Vogel-Bonner³ minimal medium E supplemented with 25 g per liter of Nutrient Broth No. 2 (Oxoid).

¹The experimental materials, methods and procedures are based on those described by Ames, B. N., et al. Methods for detecting carcinogens and mutagens with the Salmonella/mammalian-microsome mutagenicity test. Mutation Research **31**: 347-364, 1975.

²Vogel, H. J. and D. M. Bonner, Acetylornithinase of E. coli: partial purification and some properties, J. Biol. Chem., **218**:97-106 (1956).

³Ibid.

Tester Strain Diluent: Diluent for tester strain titering contained Vogel-Bonner salt solution⁴ supplemented with 10% Nutrient Broth.

Test Article Diluent: The solvent used for diluting the test article was deionized, distilled H₂O.

Tester Strains

The tester strains used were the histidine auxotrophs TA98 and TA1537 described by Ames⁵.

GENOTYPE OF THE TA STRAINS USED FOR MUTAGEN TESTING

Histidine mutation		Additional mutations		
<u>hisC3076</u>	<u>hisD3052</u>	LPS	Repair	R factor
	TA98	<u>rfa</u>	<u>uvrB</u>	+R
TA1537		<u>rfa</u>	<u>uvrB</u>	-

The tester strains possess characteristics which greatly enhance their sensitivity to mutagenic materials.

Both strains possess the rfa wall mutation which has resulted in the loss of much of the lipopolysaccharide layer that coats the surface of the bacteria. This allows the entry into the bacterial cells of large ring compounds that would otherwise be excluded by a normal intact cell wall. Secondly, a stable mutation resulting in the loss of an excision repair system (uvrB) further enhances both tester strains' sensitivity to some mutagens. Finally, strain TA98 contains the pkM101 plasmid which further increases the sensitivity of this strain to some mutagens.

TA98 and TA1537 are reverted from histidine dependence (auxotrophy) to histidine independence (prototrophy) by frame shift mutagens.

⁴Vogel, H. J., et al., op cit.

⁵Ames, B. N., et al., op cit.

Tester strains in use at Microbiological Associates were received directly from Dr. Bruce Ames, Department of Biochemistry, University of California, Berkeley.

Tester strain stocks were stored in liquid nitrogen, and fresh cultures were inoculated directly from these frozen stocks. Broth cultures were grown overnight at 37°C with shaking. At the time of its use in the mutagenicity assay, each culture was checked, as described by Ames, for the presence of the rfa wall mutation and strain TA98 was checked for the presence of the pkM101 plasmid.⁶

Plating Procedures for the Mutagenicity Assay

Test System Identification: Each plate was labeled using indelible ink with a code system which identifies the test article, test phase, dose level and activation as described in detail in Microbiological Associates' Microbial Mutagenesis Standard Operating Procedures.

Test Article: The test article was solubilized and serially diluted immediately before its use in the mutagenicity assay. Five doses of the test article were plated with TA98 and TA1537 with metabolic activation. All positive controls, solvent controls and test article doses were plated in triplicate. With metabolic activation, 50 µl of tester strain, 50 µl of solvent or test article, and 0.5 ml of the appropriate S-9 mix were added to 2.0 ml of molten selective top agar at 45°C. After vortexing, the mixture was overlaid onto the surface of 25 ml of minimal bottom agar. After the overlay had solidified, the plates were inverted and incubated for 48 hours at 37°C.

Positive Controls: All combinations of positive controls and tester strains plated along with the assay are listed below:

<u>Strain</u>	<u>Activation</u>	<u>Positive Controls</u>	<u>Conc. per Plate</u>
TA98	+	2-Aminoanthracene	4.0 µg
TA98	-	2-Nitrofluorene	5.0 µg
TA1537	+	2-Aminoanthracene	4.0 µg
TA1537	-	9-Aminoacridine	75 µg

⁶Ames, B. N., et al., op cit.

Source and Grade

9-Aminoacridine (CAS #90-45-9), Sigma Chemical Co.,
grade II, ~90% pure

2-Aminoanthracene (CAS #613-13-8), Sigma Chemical Co.,
practical grade

2-Nitrofluorene (CAS #607-57-8), Aldrich Chemical Co.,
98% pure

Tester Strain Titters: Tester strain titers were determined by viable count assays on nutrient agar plates. The averaged number of cells plated per plate are reported on the individual strain data forms.

Test Article Sterility Determination: The most concentrated test article dilution for the mutagenicity assay was checked for sterility by plating a 50 μ l aliquot of the dilution on selective agar.

Liver Microsomal Enzymes

Preparation of S-9 Homogenate: Rat liver microsomal enzymes were prepared from male Sprague-Dawley rats that had been injected with Aroclor 1254 at 500 mg/kg. Hamster liver microsomal enzymes were prepared from male Syrian hamsters that had been injected with Aroclor 1254 at 500 mg/kg. The Aroclor was diluted in corn oil to a concentration of 200 mg/ml. Five days after their i.p. injection with the Aroclor, the animals were sacrificed by decapitation, and their livers were excised.

The preparation of the microsomal enzyme fraction was carried out with sterile glassware and solutions at 0-4°C. The excised livers were placed in approximately 20 ml of 0.15M KCl contained in a pre-weighed beaker. After weighing the liver, it was transferred to another beaker containing 3 volumes of 0.15M KCl (3 ml/g of wet liver) where it was minced with sterile scissors. The minced liver was homogenized and centrifuged at 9000 x g for 10 minutes. The supernatant (referred to by Ames as the S-9 fraction)

was decanted, and small aliquots were distributed into freezing ampules which were stored at $\leq -70^{\circ}\text{C}$.

Preparation of S-9 Mix: The S-9 mixes were prepared immediately before their use in the mutagenicity assay.

For both rat and hamster activation, three different S-9 mixes were used in this study. The mixes differ only in the amount of S-9 homogenate added per ml of S-9 mix. The components per ml of each S-9 mix are indicated below:

5% S-9 Homogenate

H ₂ O	0.61 ml
1.00M NaH ₂ PO ₄ , pH 7.4	0.10 ml
0.20M MgCl ₂ /0.825M KCl	0.04 ml
0.05M G-6-P	0.10 ml
0.04M NADP	0.10 ml
S-9	<u>0.05 ml</u>
	1.00 ml

10% S-9 Homogenate

H ₂ O	0.56 ml
1.00M NaH ₂ PO ₄ , pH 7.4	0.10 ml
0.20M MgCl ₂ /0.825M KCl	0.04 ml
0.05M G-6-P	0.10 ml
0.04M NADP	0.10 ml
S-9	<u>0.10 ml</u>
	1.00 ml

30% S-9 Homogenate

H ₂ O	0.36 ml
1.00M NaH ₂ PO ₄ , pH 7.4	0.10 ml
0.20M MgCl ₂ /0.825M KCl	0.04 ml
0.05M G-6-P	0.10 ml
0.04M NADP	0.10 ml
S-9	<u>0.30 ml</u>
	1.00 ml

Each plate received 0.5 ml of the S-9 mix.

Colony Counting

Revertant colonies for a given tester strain within a given test article dilution series were counted either entirely by automated colony counter or entirely by hand. Plates with sufficient test article precipitate to interfere with automated colony counting were counted manually.

The condition of the background bacterial lawn was evaluated for evidence of test article toxicity, by using a dissecting microscope. This toxicity was scored relative to the solvent control plate and recorded along with the revertant count for that plate on the individual strain data forms using the code system on page 19.

Analysis of Data

All platings were done in triplicate. For each triplicate plating, an average and standard deviation were calculated. The calculations were done on a Hewlett-Packard HP-25 programmable calculator which employs the following equations:

Average (\bar{x})

$$\bar{x} = \frac{1}{n} \sum_{i=1}^n x_i$$

Standard Deviation (S_x)

$$S_x = \sqrt{\frac{\sum x^2 - \frac{(\sum x)^2}{n}}{n-1}}$$

Evaluation of Mutagenicity Assay Data

For a test article to be considered positive, it must cause at least a doubling in the mean revertants per plate of at least one tester strain. This increase in the mean number of revertants per plate must be accompanied by a dose response

to increasing concentrations of the test article. In those cases where the observed dose-responsive increase in TA1537 revertants per plate is less than three-fold, the response must be reproducible.

Archives

All experimental records of the study are maintained in the Microbiological Associates' archives located at 1530 East Jefferson Street, Rockville, Maryland, 20852.

Nona Karten, of the Regulatory Affairs and Quality Assurance Unit, is responsible for maintaining the archives.

Stability of the Test Article

The stability of the test article under the actual experimental conditions used in this study was not determined by Microbiological Associates.

RESULTS

SALMONELLA MUTAGENICITY ASSAY

TABLE 1

T2039, 501008
Study Number

AT0214, Lot No. GT115
Test Article Identification

<u>T2039-B6</u> Experiment Number		Concentration (µg per plate)									
		Solvent Control H ₂ O 50 µl	100	200	400	500	600				
Strain: <u>TA98</u> Date Plated: <u>8/17/83</u> Cells Seeded: <u>1.4</u> x10 ⁸ Liver Microsomes: <u>Rat 5%</u> Colonies Counted by: Hand <input checked="" type="checkbox"/> Machine <input type="checkbox"/>	*							2	3		
	Revertants	32	23	35	46	40	21				
	per							2	3		
	plate	39	17	34	34	45	23				
Averaged Revertants Standard Deviation		27	28	39	33	42	57	2			
		33	23	36	38	42	34				
		6	6	3	7	3	20				

<u>T2039-B6</u> Experiment Number		Concentration (µg per plate)									
		Solvent Control H ₂ O 50 µl	100	200	400	500	600				
Strain: <u>TA98</u> Date Plated: <u>8/17/83</u> Cells Seeded: <u>1.4</u> x10 ⁸ Liver Microsomes: <u>Hamster 5%</u> Colonies Counted by: Hand <input checked="" type="checkbox"/> Machine <input type="checkbox"/>	*							2	3		
	Revertants	26	31	0	28	25	23				
	per							2	3		
	plate	26	33	0	0	39	25				
Averaged Revertants Standard Deviation		31	27	0	0	45	33	2			
		28	30	-	28	36	27				
		3	3	-	-	10	5				

*Background bacterial lawn evaluation code
**The absence of revertants and background lawn colonies on these plates at non-toxic dose levels indicates a probable plating procedural error. For this reason, these counts have not been included in the average or standard deviation calculations.

SALMONELLA MUTAGENICITY ASSAY

TABLE 2

T2039-501008
Study Number

AT0214, Lot No. GT115
Test Article Identification

<u>T2039-B6</u> Experiment Number		Concentration (µg per plate)					
		Solvent Control H ₂ O 50 µl	100	200	400	500	600
Strain: TA98 Date Plated: 8/17/83 Cells Seeded: 1.4 x10 ⁸ Liver Microsomes: Rat 10% Colonies Counted by: Hand <input checked="" type="checkbox"/> Machine <input type="checkbox"/>	*					2	3
	Revertants per plate	22	33	20	37	40	42
		28	32	23	35	48	34
	Averaged Revertants Standard Deviation	28	21	28	50	43	33
		26	29	24	41	44	36
		3	7	4	8	4	5

<u>T2039-B6</u> Experiment Number		Concentration (µg per plate)					
		Solvent Control H ₂ O 50 µl	100	200	400	500	600
Strain: TA98 Date Plated: 8/17/83 Cells Seeded: 1.4 x10 ⁸ Liver Microsomes: Hamster 10% Colonies Counted by: Hand <input checked="" type="checkbox"/> Machine <input type="checkbox"/>	*					2	3
	Revertants per plate	34	39	36	47	49	30
		39	24	32	46	53	40
	Averaged Revertants Standard Deviation	33	30	36	44	53	37
		35	31	35	46	52	36
		3	8	2	2	2	5

*Background bacterial lawn evaluation code

SALMONELLA MUTAGENICITY ASSAY

TABLE 3

T2039.501008
Study Number

AT0214, Lot No. GT115
Test Article Identification

<u>T2039-B6</u> Experiment Number		Concentration (µg per plate)					
Strain: <u>TA98</u> Date Plated: <u>8/17/83</u> Cells Seeded: <u>1.4 x10⁸</u> Liver Microsomes: <u>Rat 30%</u> Colonies Counted by: Hand <input checked="" type="checkbox"/> Machine <input type="checkbox"/>	Solvent Control H ₂ O 50 µl	100	200	400	500	600	
	*				2	2	
	Revertants per plate	27	31	28	47	43	41
		31	25	30	35	51	29
		30	30	33	31	32	39
Averaged Revertants Standard Deviation	29	29	30	38	42	38	
	2	3	3	8	10	6	

<u>T2039-B6</u> Experiment Number		Concentration (µg per plate)					
Strain: <u>TA98</u> Date Plated: <u>8/17/83</u> Cells Seeded: <u>1.4 x10⁸</u> Liver Microsomes: <u>Hamster 30%</u> Colonies Counted by: Hand <input checked="" type="checkbox"/> Machine <input type="checkbox"/>	Solvent Control H ₂ O 50 µl	100	200	400	500	600	
	*					2	
	Revertants per plate	23	25	23	34	53	46
		31	30	31	37	53	52
		37	35	22	39	47	70
Averaged Revertants Standard Deviation	30	30	25	37	51	56	
	7	5	5	3	3	12	

*Background bacterial lawn evaluation code

SALMONELLA MUTAGENICITY ASSAY

TABLE 4

T2039-501008
Study Number

AT0214 Lot No. GT115
Test Article Identification

T2039-B6 Experiment Number		Concentration (µg per plate)						
		Solvent Control H ₂ O 50 µl	100	200	400	500	600	
Strain: TA1537 Date Plated: 8/17/83 Cells Seeded: 1.5 x10 ⁸ Liver Microsomes: Rat 5% Colonies Counted by: Hand <input checked="" type="checkbox"/> Machine <input type="checkbox"/>	*				2	2	3	
	Revertants per plate	9	5	9	12	9	10	
		8	7	5	8	13	6	
		12	8	9	11	12	8	
Averaged Revertants Standard Deviation		10	7	8	10	11	8	
		2	2	2	2	2	2	

T2039-B6 Experiment Number		Concentration (µg per plate)						
		Solvent Control H ₂ O 50 µl	100	200	400	500	600	
Strain: TA1537 Date Plated: 8/17/83 Cells Seeded: 1.5 x10 ⁸ Liver Microsomes: Hamster 5% Colonies Counted by: Hand <input checked="" type="checkbox"/> Machine <input type="checkbox"/>	*				2	2	3	
	Revertants per plate	7	9	10	10	10	6	
		12	8	6	12	9	5	
		8	5	9	10	8	4	
Averaged Revertants Standard Deviation		9	7	8	11	9	5	
		3	2	2	1	1	1	

*Background bacterial lawn evaluation code

Form No. MA-160
12/17/82

SALMONELLA MUTAGENICITY ASSAY

TABLE 5

T2039.501008
Study Number

AT0214, Lot No. GT115
Test Article Identification

<u>T2039-B6</u> Experiment Number		Concentration (µg per plate)									
		Solvent Control H ₂ O 50 µl	100	200	400	500	600				
Strain: <u>TA1537</u> Date Plated: <u>8/17/83</u> Cells Seeded: <u>1.5</u> x10 ⁸ Liver Microsomes: <u>Rat 10%</u> Colonies Counted by: Hand <input checked="" type="checkbox"/> Machine <input type="checkbox"/>	*				2	2	3				
	Revertants per plate	7	3	7	10	8	4				
		12	6	11	14	11	8				
		6	7	9	7	12	12				
	Averaged Revertants Standard Deviation	8	5	9	10	10	8				
		3	2	2	4	2	4				

<u>T2039-B6</u> Experiment Number		Concentration (µg per plate)									
		Solvent Control H ₂ O 50 µl	100	200	400	500	600				
Strain: <u>TA1537</u> Date Plated: <u>8/17/83</u> Cells Seeded: <u>1.5</u> x10 ⁸ Liver Microsomes: <u>Hamster 10%</u> Colonies Counted by: Hand <input checked="" type="checkbox"/> Machine <input type="checkbox"/>	*				2	2	2				
	Revertants per plate	7	8	8	10	16	11				
		4	2	12	11	7	12				
		6	5	6	9	6	7				
	Averaged Revertants Standard Deviation	6	5	9	10	10	10				
		2	3	3	1	6	3				

*Background bacterial lawn evaluation code

SALMONELLA MUTAGENICITY ASSAY

TABLE 6

T2039.501008
Study Number

AT0214, Lot No. GT115
Test Article Identification

T2039-B6 Experiment Number		Concentration (µg per plate)					
		Solvent Control H ₂ O 50 µl	100	200	400	500	600
Strain: TA1537 Date Plated: 8/17/83 Cells Seeded: 1.5 x10 ⁸ Liver Microsomes: Rat 30% Colonies Counted by: Hand <input checked="" type="checkbox"/> Machine <input type="checkbox"/>	*				2	2	2
	Revertants per plate	18	9	7	9	22	12
		9	7	17	9	14	9
		13	7	14	8	15	18
Averaged Revertants Standard Deviation		13	8	13	9	17	13
		5	1	5	1	4	5

T2039-B6 Experiment Number		Concentration (µg per plate)					
		Solvent Control H ₂ O 50 µl	100	200	400	500	600
Strain: TA1537 Date Plated: 8/17/83 Cells Seeded: 1.5 x10 ⁸ Liver Microsomes: Hamster 30% Colonies Counted by: Hand <input checked="" type="checkbox"/> Machine <input type="checkbox"/>	*					2	2
	Revertants per plate	5	7	9	11	7	12
		14	15	8	6	9	10
		6	5	6	9	10	11
Averaged Revertants Standard Deviation		8	9	8	9	9	11
		5	5	2	3	2	1

*Background bacterial lawn evaluation code

SALMONELLA MUTAGENESIS ASSAY

Positive Controls

Table 7

T2039-501008		T2039-B6		AT0214, Lot No. GT115			
Study Number		Experiment Number		Test Article Identification			
Date plated	Strain	Chemical	Concentration per plate	Metabolic Activation	Revertants/Plate	Averaged Revertants per plate	S.D.
8/17/83	TA98	2-Nitrofluorene	5.0 µg	None	1166 1124 1227	1172	52
8/17/83	TA98	2-Aminoanthracene	4.0 µg	Rat 5%	3319 3416 3312	3349	58
8/17/83	TA98	2-Aminoanthracene	4.0 µg	Rat 10%	2039 1914 2092	2015	91
8/17/83	TA98	2-Aminoanthracene	4.0 µg	Rat 30%	795 915 780	830	74
8/17/83	TA98	2-Aminoanthracene	1.5 µg	Hamster 5%	2982 2899 3203	3028	157
8/17/83	TA98	2-Aminoanthracene	1.5 µg	Hamster 10%	2593 2725 2489	2602	118
8/17/83	TA98	2-Aminoanthracene	1.5 µg	Hamster 30%	506 453 554	504	51

Colonies were machine counted.

SALMONELLA MUTAGENESIS ASSAY

Positive Controls

Table 8

T2039.501008		T2039-B6		AT0214, Lot No. GT115			
Study Number		Experiment Number		Test Article Identification			
Date Plated	Strain	Chemical	Concentration per plate	Metabolic Activation	Revertants/plate	Averaged Revertants per plate	S.D.
8/17/83	TAL537	9-Aminoacridine	75 ug	None	438	333 426	399 57
8/17/83	TAL537	2-Aminoanthracene	4.0 ug	Rat 5%	500	552 457	503 48
8/17/83	TAL537	2-Aminoanthracene	4.0 ug	Rat 10%	297	295 287	293 5
8/17/83	TAL537	2-Aminoanthracene	4.0 ug	Rat 30%	65	99 66	77 19
8/17/83	TAL537	2-Aminoanthracene	1.5 ug	Hamster 5%	410	455 444	436 23
8/17/83	TAL537	2-Aminoanthracene	1.5 ug	Hamster 10%	296	331 316	314 18
8/17/83	TAL537	2-Aminoanthracene	1.5 ug	Hamster 30%	58	62 58	59 2

Colonies were machine counted.

BACTERIAL BACKGROUND LAWN EVALUATION CODES

The condition of the background bacterial lawn is evaluated, first macroscopically and then microscopically (using a dissecting microscope). The evaluation is recorded using the following code:

Code	Definition	Characteristics
1 or blank	Normal	Distinguished by a healthy microcolony lawn.
2	Slightly Reduced	Distinguished by a noticeable thinning of the microcolony lawn and an increase in the size of the microcolonies compared to the solvent control plate.
3	Moderately Reduced	Distinguished by a marked thinning of the microcolony lawn and an increase in the size of the microcolonies compared to the solvent control plate.
4	Extremely Reduced	Distinguished by an extreme thinning of the microcolony lawn and an increase in the size of the microcolonies compared to the solvent control plate.
5	Absent	Distinguished by a complete lack of any microcolony background lawn.
6	Obscured by Precipitate	The background bacterial lawn cannot be accurately evaluated due to microscopic test article precipitate.

Evidence of macroscopic test article precipitate on the plates is recorded by addition of the following precipitate code to the code number used to evaluate the condition of the background bacterial lawn.

SP	Slight Precipitate	Distinguished by noticeable precipitate on the plate, however, the precipitate does not influence automated counting of the plate.
MP	Moderate Precipitate	Distinguished by a marked amount of precipitate on the plate, requiring the plate to be hand counted.
HP	Heavy Precipitate	Distinguished by a large amount of precipitate on the plate, making the required hand count difficult.

Thus, 3-MP would indicate a plate observed to have a moderately reduced background lawn with a marked amount of precipitate which required a hand count.

APPENDIX

PROTOCOL AMENDMENT

Date: September 15, 1983

Sponsor:

Sponsor's Test Article Designation: AT0214

Study No.: T2039.501008

Protocol No.: SPGT501008 080983

Protocol Title: Salmonella/Mammalian-Microsome Plate Incorporation
Mutagenicity Assay (Ames Test)

1. Section 6.3.2, S-9 Mix; the stock solution listed as "0.04M G-6-P" should be "0.05M G-6-P".

Reason for Amendment:

Typographical error in protocol preparation.

APPROVAL:

Steve R. Haworth 9/15/83
Steve R. Haworth, Ph.D. Date
Study Director

Study Coordinator _____ Ph.D. _____ Date 9/16/83

SALMONELLA/MAMMALIAN-MICROSOME PLATE INCORPORATION
MUTAGENICITY ASSAY (AMES TEST)

1.0 PURPOSE

The purpose of this study is to evaluate the mutagenic potential of the test article (or its metabolites) based on its ability to induce back mutations at selected loci of selected strain(s) of Salmonella typhimurium in the presence of exogenous metabolic activation by three different concentrations of induced rat and hamster liver microsomes.

2.0 TEST ARTICLE

2.1 Identification: AT0214

2.2 Analysis:

The sponsor will be directly responsible for determination and documentation of the analytical purity and composition of the test article (see attached Test Article Characterization form) and the stability of the dosing solutions.

3.0 SPONSOR

3.1 Name:

3.2 Address:

3.3 Authorized Representative:

4.0 TESTING FACILITY

4.1 Name: Division of Genetic Toxicology
Microbiological Associates

4.2 Address: 5221 River Road
Bethesda, Maryland 20816

4.3 Study Location: Rockville Laboratory

4.4 Study Director: Steve R. Haworth, Ph.D.

5.0 TEST SYSTEM

The Ames Test has been shown to be a sensitive, rapid, accurate indicator of the mutagenic activity of a wide range of chemical classes.

The Salmonella typhimurium histidine auxotroph tester strains to be used may include TA98, TA100, TA1535, TA1537 and TA1538 as described by Ames (Ames, et al., Mutation Research 31:347-364, 1975). The actual strains to be used will be as follows:

TA98, TA1537 SRH 8/10/83
Initials Date

GENOTYPE OF THE TA STRAINS USED FOR MUTAGEN TESTING

Histidine mutation			Additional mutations		
<u>hisG46</u>	<u>hisC3076</u>	<u>hisD3052</u>	LPS	Repair	R factor
TA1535	TA1537	TA1538	<u>rfa</u>	<u>uvrB</u>	-
TA100		TA98	<u>rfa</u>	<u>uvrB</u>	+R

All of the tester strains contain, in addition to a mutation in the histidine operon, two additional mutations which enhance their sensitivity to some mutagenic compounds. The rfa mutation causes a loss of one of the enzymes responsible for the synthesis of part of the lipopolysaccharide layer of the cell wall. The resulting cell wall deficiency increases the permeability of the cell to certain classes of chemicals such as those containing large ring systems that would otherwise be excluded by a normal intact cell wall.

The second mutation is a deletion in the uvrB gene which results in a deficient DNA excision-repair system. This deficiency results in greatly enhanced sensitivity to some mutagens. Since the uvrB deletion extends through the bio gene, all of the tester strains containing this deletion also require the vitamin biotin for growth.

Finally, strains TA98 and TA100 also contain the pkM101 plasmid (carrying the R-factor) which further increases the sensitivity of these two strains to some mutagens. The mechanism by which this plasmid increases sensitivity to mutagens has been suggested to be due to its coding for an error-prone DNA repair polymerase.

TA98, TA1537 and TA1538 are reverted from histidine dependence (auxotrophy) to histidine independence (prototrophy) by frame shift mutagens. TA100 and TA1535 are reverted by mutagens that cause base substitutions.

5.1 Source

Tester strains in use at Microbiological Associates were received directly from Dr. Bruce Ames, Department of Biochemistry, University of California, Berkeley.

5.2 Storage

All Frozen Permanent and Working Stocks of the tester strains will be stored in liquid nitrogen. Working Stocks will be prepared by growing a fresh overnight culture inoculated by a scrape of the Frozen Permanent Stock, adding DMSO (.09 ml/ml of culture) and freezing away small aliquots (0.1 - 0.2 ml) in glass vials.

5.3 Overnight Culture Preparation

Overnight cultures will be prepared by removing a Working Stock vial from the liquid nitrogen freezer and allowing it to thaw. A loopful of the thawed aliquot will be transferred to a baffled shake flask containing approximately 50 ml of culture media. The inoculated flask will be placed in a shaker/incubator at 37°C.

5.4 Harvesting of Cultures

All cultures will be harvested by monitoring optical density rather than by duration of incubation since overgrowth of cultures can cause loss of sensitivity to some mutagens. Cultures will be removed from incubation at a density of approximately $1-2 \times 10^9$ cells per ml.

5.5 Genotype Characterization

On the day of their use in the mutagenicity assay, all tester strain cultures will be checked for the following genetic markers:

5.5.1 The presence of the rfa wall mutation will be confirmed by demonstration of sensitivity to crystal violet.

5.5.2 The presence of the pkM101 plasmid will be confirmed for tester strains TA98 and TA100 by demonstration of resistance to Ampicillin.

5.5.3 Spontaneous reversion frequencies that are characteristic of the respective strains will be demonstrated by plating aliquots of the culture on selective media.

6.0 EXPERIMENTAL DESIGN

The test article will be tested at a minimum of five dose levels along with appropriate solvent and positive controls on Salmonella tester strains which may include TA98, TA100, TA1535, TA1537 and TA1538 with and without metabolic activation. Following an approximate 48 hour incubation at 37°C, revertant colonies per plate will be counted.

6.1 Dose Levels

Unless other supporting data is available, a preliminary toxicity study will be conducted. Using TA100 as the indicator strain, each test article will be checked for toxicity up to a concentration of 10 mg/plate if solubility/miscibility permits. Test articles which exhibit limited solubility/miscibility will be tested for toxicity up to the maximum workable concentration attainable in the solvent of choice. The toxicity determination will be conducted in the presence of exogenous metabolic activation. An aliquot from each of at least eight dilutions of the test article will be plated with an overnight TA100 culture on selective minimal agar. Toxicity is detectable as a decrease in the number of revertant colonies occurring per plate and/or by a thinning or disappearance of the background bacterial lawn. The highest concentration of test article used in the subsequent mutagenicity assay will be that which gives a detectable reduction of revertants on the selective plates and/or a thinning or disappearance of the background bacterial lawn.

If no toxicity is observed, then the highest dose level used in the mutagenicity assay will be 10 mg/plate unless:

- 1) The test article exhibits limited solubility or is not uniformly dispersible in the solvent of choice.
- 2) The test article precipitates heavily in the top agar.
- 3) There is insufficient test article available to either demonstrate toxicity or achieve a maximum dose level of 10 mg/plate.
- 4) The study coordinator indicates an alternate top dose level.

6.2 Frequency and Route of Administration

The test system will be exposed to the test article via the plate incorporation methodology originally

described by Ames (Ames, et al., Mutation Research 31:347-364, 1975). This methodology has been shown to detect a wide range of classes of chemical mutagens. All dose levels of test article, solvent controls and positive controls will be plated in triplicate.

6.3 Exogenous Metabolic Activation

6.3.1 Liver Microsomal Enzymes - S-9 Homogenate

6.3.1.1 Homogenate Preparation

The preparation of the microsomal enzyme fraction will be carried out with sterile glassware and solutions at 0-4°C. Excised livers will be placed in approximately 20 ml of 0.15M KCl contained in a pre-weighed beaker. After the liver is weighed, it will be transferred to another beaker containing 3 volumes of 0.15M KCl (3 ml/g of wet liver) where it will be minced with sterile scissors. The minced liver will be homogenized and centrifuged at 9000 x g for 10 minutes. The supernatant (referred to by Ames as the S-9 fraction) will be decanted, and small aliquots will be distributed into freezing ampules which will be stored at $\leq -70^{\circ}\text{C}$.

6.3.1.2 S-9 Characterization

Each batch of S-9 homogenate will be characterized for its ability to metabolize the promutagens 7,12-dimethylbenzanthracene, and 2-aminoanthracene to mutagens as described by deSerres (deSerres, et al., Science 203:563-565, 1979).

6.3.1.3 Species, Strain, Sex, Inducer

Liver microsomal enzymes will be prepared from male Sprague-Dawley rats and male Syrian hamsters that have been injected with Aroclor 1254 at 500 mg/kg. The Aroclor will be diluted in corn oil to a concentration of 200 mg/ml. Five days after i.p. injection with the Aroclor, the rats and hamsters will be sacrificed by decapitation, and their livers will be excised.

6.3.2 S-9 Mix

The S-9 mixes will be prepared immediately prior to their use in any experimental procedure.

Three different S-9 mixes will be used in this study. The mixes will differ only in the amount of S-9 homogenate added per ml of S-9 mix. The components per ml of each S-9 mix are indicated below:

5% S-9 Homogenate

H ₂ O	0.61 ml
1.00M NaH ₂ PO ₄ , pH 7.4	0.10 ml
0.20M MgCl ₂ /0.825M KCl	0.04 ml
0.04M G-6-P	0.10 ml
0.04M NADP	0.10 ml
S-9	0.05 ml
	<hr/> 1.00 ml

10% S-9 Homogenate

H ₂ O	0.56 ml
1.00M NaH ₂ PO ₄ , pH 7.4	0.10 ml
0.20M MgCl ₂ /0.825M KCl	0.04 ml
0.04M G-6-P	0.10 ml
0.04M NADP	0.10 ml
S-9	0.10 ml
	<hr/> 1.00 ml

30% S-9 Homogenate

H ₂ O	0.36 ml
1.00M NaH ₂ PO ₄ , pH 7.4	0.10 ml
0.20M MgCl ₂ /0.825M KCl	0.04 ml
0.04M G-6-P	0.10 ml
0.04M NADP	0.10 ml
S-9	0.30 ml
	<u>1.00 ml</u>

Each plate will receive 0.5 ml of the S-9 mix.

6.4 Controls

6.4.1 Positive Controls

All combinations of positive controls and tester strains plated concurrently with the assay are listed below:

<u>Strain</u>	<u>Activation</u>	<u>Positive Controls</u>	<u>Conc. per Plate</u>
TA98	+	2-aminoanthracene	4.0 ug
TA98	-	2-nitrofluorene	5.0 ug
TA100	+	2-aminoanthracene	4.0 ug
TA100	-	sodium azide	5.0 ug
TA1535	+	2-aminoanthracene	4.0 ug
TA1535	-	sodium azide	5.0 ug
TA1537	+	2-aminoanthracene	4.0 ug
TA1537	-	9-aminoacridine	75 ug
TA1538	+	2-aminoanthracene	4.0 ug
TA1538	-	2-nitrofluorene	5.0 ug

6.4.2 Solvent Controls

Appropriate solvent controls will be plated for all strains with exogenous metabolic activation. Solvents compatible with this test system in order of preference include but will not be limited to: Deionized distilled H₂O, dimethylsulfoxide (CAS #67-68-5), acetone (CAS #67-64-1), and ethanol (CAS #64-17-5).

6.4.3 Sterility Controls

6.4.3.1 The most concentrated test article dilution will be checked for sterility.

6.4.3.2 The S-9 mix will be checked for sterility.

6.4.4 Tester Strain Titters

Each tester strain titer will be determined by plating an appropriate dilution of each overnight culture on complete agar.

7.0 METHODS

7.1 Plating Procedures for the Mutagenicity Assay

The test article will be solubilized and serially diluted immediately before its use in the mutagenicity assay. S-9 mixes will also be prepared immediately prior to their use in the mutagenicity assay.

At least five doses of the test article will be plated with the appropriate tester strains, with each exogenous metabolic activation system.

Fifty ul of tester strain, 50 ul of solvent or test article solution and 0.5 ml of S-9 mix will be added to 2.0 ml of molten selective top agar at 45°C. After vortexing, the mixture will be overlaid onto the surface of 25 ml of minimal bottom agar. After the overlay has solidified, the plates will be inverted and incubated for approximately 48 hours at 37°C. When necessary, aliquots of other than 50 ul of test article/solvent will be plated.

7.2 Test System Identification

Each plate will be labeled using indelible ink with a code system which identifies the test article, test phase, dose level, strain and activation type as described in detail in Microbiological Associates' Microbial Mutagenesis Standard Operating Procedures.

7.3 Colony Counting

Revertant colonies for a given tester strain within a given test article dilution series will be counted either entirely by automated colony counter or entirely by hand. Plates with sufficient test article precipitate to interfere with automated colony counting will be counted manually.

7.3.1 Background Bacterial Lawn Evaluation

The condition of the background bacterial lawn on plates in the assay will be evaluated for evidence of test article toxicity and precipitate. Evidence of toxicity will be scored relative to the solvent control plate and recorded along with the revertant count for that plate.

7.4 Analysis of Data

For all replicate platings, the mean revertants per plate and the standard deviation will be calculated.

8.0 EVALUATION OF TEST RESULTS

For a test article to be considered positive, it must cause at least a doubling in the mean revertants per plate of at least one tester strain. This increase in the mean number of revertants per plate must be accompanied by a dose response to increasing concentrations of the test article. In those cases where the observed dose-responsive increase in TA1537 or TA1538 revertants per plate is less than three-fold, the response must be reproducible.

9.0 CRITERIA FOR DETERMINATION OF A VALID TEST

The following criteria must be met for the assay to be considered valid:

9.1 Tester Strain Integrity

9.1.1 rfa Wall Mutation

In order to demonstrate the presence of the deep rough wall mutation, all tester strain cultures must exhibit sensitivity to crystal violet.

9.1.2 pkM101 Plasmid R-factor

In order to demonstrate the presence of the pkM101 plasmid R-factor, tester strain cultures of TA98 and TA100 must exhibit resistance to Ampicillin.

9.1.3 Characteristic Number of Spontaneous Revertants

All tester strain cultures must exhibit a characteristic number of spontaneous revertants per plate. The acceptable ranges are as follows:

TA98	10 - 50
TA100	80 - 240
TA1535	5 - 45
TA1537	3 - 21
TA1538	5 - 35

9.1.4 Tester Strain Titters

In order to ensure that appropriate numbers of bacteria are plated, tester strain culture titers must be greater than 1×10^9 but less than 4×10^9 .

9.1.5 Positive Control Values

Positive control values must exhibit at least a three fold increase in the number of revertants per plate over the average value for the solvent control for the respective strain.

9.2 Toxicity

9.2.1 Minimum Number of Dose Levels

A minimum of three non-toxic dose levels are required to evaluate assay data.

10.0 FINAL REPORT

A report of the results of this study will be prepared by the Testing Laboratory and will accurately describe all methods used for generation and analysis of data.

Results of the preliminary toxicity determinations will be presented which will include the number of revertants per plate and a background bacterial lawn evaluation for each dose level.

Results presented for the mutagenicity assay will include the number of revertants per plate with a corresponding background bacterial lawn evaluation, along with a mean and standard deviation for all replicate platings.

11.0 RECORD AND TEST ARTICLE ARCHIVES

11.1 Records

Upon completion of the final report, all raw data and reports will be maintained by the Regulatory Affairs Unit of Microbiological Associates in accordance with the Terms and Conditions.

11.2 Test Article

A sample of the Test Article will be held in storage in accordance with the Terms and Conditions.

12.0 GOOD LABORATORY PRACTICES

This study will be performed in compliance with the provisions of the Good Laboratory Practice Regulations for Nonclinical Laboratory Studies.

Will this study be submitted to a regulatory agency? _____
If so, to which agency or agencies? _____

Does the sponsor request that samples of the Test Article dosing solutions be returned? _____

13.0 SCHEDULE OF EVENTS

13.1 Proposed Initiation Date: 8/11/83

13.2 Scheduled Completion Date: 8/31/83

14.0 REFERENCES

Ames, B.N., McCann, J., and Yamasaki, E. Methods for detecting carcinogens and mutagens with the Salmonella/Mammalian-Microsome Mutagenicity test. Mutation Research 31:347-364, 1975.

deSerres, et al., The Salmonella Mutagenicity Assay: Recommendations, Science 203:563-565, 1979.

8/9/83

DATE PROTOCOL APPROVED BY SPONSOR

Steve R. Hawthorn
STUDY DIRECTOR

8/11/83
DATE



Pamela G. Bailey
President & CEO

June 2, 2005

Dr. Scott A. Masten
Office of Chemical Nomination and Selection
NIEHS/NTP
111 T.W. Alexander Drive
P.O. Box 12233
Research Triangle Park, NC 27709

RE: Request for Additional Information on Toxicological Study Nominations to the National Toxicology Program (70 Federal Register 23877): Imidazolidinyl Urea

Dear Dr. Masten,

The Cosmetic, Toiletry, and Fragrance Association¹ (CTFA) appreciates the opportunity to provide additional information on the above referenced topic. Imidazolidinyl Urea is used as a preservative within the personal care products industry, and thus its nomination for study is of interest to CTFA members. When reading the NTP background document on Imidazolidinyl Urea, we noted that data on Diazolidinyl Urea are also included. The background document cites the Cosmetic Ingredient Review (CIR) as finding that Diazolidinyl Urea was not mutagenic in *S. typhimurium* and that it does not induce micronuclei, but that no technical details were available.

The three unpublished studies regarding genotoxicity of Diazolidinyl Urea cited in the CIR report are enclosed. These papers are listed as follows in the reference section of the CIR report.

33. Microbiological Associates. (July 29, 1983). Salmonella/mammalian-microsome mutagenicity assay. Submission of unpublished data by CTFA.

34. Microbiological Associates (September 15, 1983). Salmonella/mammalian-microsome mutagenicity assay. Submission of unpublished data by CTFA.

35. Pharmakon Research International, Inc. (December 12, 1986). Micronucleus test. Submission of unpublished data by CTFA.

¹Based in Washington, D.C., CTFA is the trade association representing the cosmetic, toiletry, and fragrance industry in the United States and globally. Founded in 1894, CTFA has a membership of nearly 600 companies including manufacturers, distributors, and suppliers for the vast majority of finished personal care products marketed in the United States.

Page 2

Unpublished data cited in CIR reports are available from CIR upon request. In the future, if unpublished data cited in CIR reports are needed by the NTP, please contact Dr. Carol Eisenmann, at CTFA (eisenmannc@ctfa.org) and she will assist you in getting this information.

Sincerely,

A handwritten signature in black ink, appearing to read "G. McEwen, Jr.", with a stylized flourish at the end.

Gerald N. McEwen, Jr., Ph.D., J.D.
Vice President - Science

Scott Masten

Subject: Imidazolidinyl Urea

Date: Monday, June 6, 2005 10:16 AM

From: Carol Eisenmann <eisenmannnc@ctfa.org>

To: <masten@niehs.nih.gov>

Dear Dr. Masten,

RE: Request for Additional Information on Toxicological Study Nominations to the National Toxicology Program (70 Federal Register 23877): Imidazolidinyl Urea

Attached, please find a submission letter and three unpublished studies on Diazolidinyl Urea mentioned in the Imidazolidinyl Urea background document.

This submission was also sent to you by FedEx on Friday June 3, 2005.

Sincerely,

Carol

Carol J. Eisenmann, Ph.D., D.A.B.T.
Toxicologist, Science Department
CTFA
1101 17th Street, N.W., Suite 300
Washington DC 20036-4702
Phone: 202 331-1770
Fax: 202 331-1969
eisenmannnc@ctfa.org

GERMALL II

MOUSE MICRONUCLEUS TEST
FOR CHROMOSOMAL ABERRATIONS

PH 309-SU-001-86



SUTTON LABORATORIES INC.
CHATHAM, N.J. 07928

PHARMAKON RESEARCH INTERNATIONAL, INC.

WAVERLY, PENNSYLVANIA 18471

PHONE
(717) 586-2411

Micronucleus Test (MNT) EPA

PH 309-SU-001-86

Germall II
Lot # GT-152

Submitted to

Sutton Laboratories, Inc.
Chatham, New Jersey

Ruth M. Sorg
Ruth M. Sorg, M.S. (Hyg.)
Study Director

December 10, 1986
Date

Robert W. Naumith
Test Facility Management

December 14, 1986
Date

TABLE OF CONTENTS

SUMMARY.....	1
STUDY DESCRIPTION:.....	2
PURPOSE.....	3
METHODS AND MATERIALS.....	3
Preparation of Control and Test Articles.....	3
Positive Control Article.....	4
Dose Selection.....	4
MICRONUCLEUS TEST.....	4
Treatment Procedure.....	4
Pharmacotoxic Effects of Treatment.....	5
Slide Preparation.....	5
Staining.....	6
Coding of Slides.....	6
Criteria for Scoring Micronuclei.....	6
Slide Analysis.....	6
Statistical Evaluation.....	7
Results.....	7
Criteria for a Valid Test.....	7
CONCLUSION.....	7
REFERENCE.....	7
TABLES.....	9
QUALITY ASSURANCE STATEMENT.....	15
COMPLIANCE STATEMENT.....	16



Micronucleus Test (MNT)

PH 309-SU-001-86
Germall II

SUMMARY

Doses for the Micronucleus Test on Germall II were selected from the previously reported results of an acute oral toxicity study in mice on Germall II done at Pharmakon Research International, Inc. In discussion with the sponsor, the doses selected were 1200, 2000 and 2800 mg/kg.

In the Micronucleus Test, nine groups of ten animals (5 males and 5 females/group) were given single doses of Germall II in 0.25% methylcellulose (0.25% MC) by oral gavage at 1200, 2000 or 2800 mg/kg and sacrificed at 30, 48 or 72 hours. Similar groups, administered the vehicle control, 0.25% MC were evaluated concurrently at each sacrifice interval. An additional group of ten animals (5 males and 5 females) was administered cyclophosphamide (CP) in 0.9% saline at a dose of 60 mg/kg and sacrificed at 30 hours, serving as the positive control. Slides were prepared from the bone marrow of the femora and stained. Coded slides were scored for the number of polychromatic erythrocytes (PCE) with micronuclei in 1000 PCE/animal. The ratio of polychromatic to normochromatic erythrocytes (NCE) per 1000 erythrocytes was determined for each animal.

The results for test article, Germall II, were negative in the Micronucleus Test at dose levels of 1200, 2000 and 2800 mg/kg at all of the time intervals evaluated. These findings are based upon the inability of the test article to produce a statistically significant increase in the number of micronuclei in 1000 polychromatic erythrocytes per animal in the treated groups versus the vehicle control groups.



STUDY DESCRIPTION

Sponsor: Sutton Laboratories
Chatham, New Jersey 07928

Study Number: PH 309-SU-001-86

TEST ARTICLE

The test article, Germall II, Lot # GT-152, was received by Pharmakon Research International, Inc. on July 24, 1986 in a plastic bag and the physical description of the test article upon receipt was a white powder. Normal precautions were used in handling the test article. All documentation supplied by the sponsor concerning stability and purity of the test article was the responsibility of the sponsor. Information as to the stability, purity, expiration date and other technical aspects of the test article was recorded in the sponsor's file. For the purposes of this study, the test article was stored at room temperature in the container received from the sponsor. All required dose levels were made with 0.25% methylcellulose on the day of administration. At the time of testing the test article was described as a white powder. There was no apparent change in the physical state of the test or control articles during the assay. Details of the test article preparation are contained in the Methods and Materials section of this report. Dosing solutions were used within two hours of preparation. Samples of the test article/vehicle solutions were sent to the sponsor for analysis, along with a sample of the vehicle control.

Date Micronucleus
Test Initiated: October 21, 1986

Date Micronucleus
Test Completed: November 21, 1986

Sponsor's Study
Monitor: Grover Vernon Foster, Jr., Ph.D.

Pharmakon's Study
Director: Ruth M. Sorg, M.S. (Hyg.), Pharmakon Research International, Inc.

Technical
Performance: Nancy Gongliewski, Nira Madison,
Susan M Lucenti, B.S., and Ruth M. Sorg, M.S. (Hyg.)

Notebook
Reference: Notebook #1123, pages 88-131 (Study)

Good Laboratory Practices Statement: This study was conducted in compliance with the Good Laboratory Practice Regulations for non-clinical laboratory studies as developed by the U.S. Food and Drug Administration (Code of Federal

Regulations, Title 21, part 58 revised as of April 1, 1980), as well as the U.S. Environmental Protection Agency (EPA) as stated in the Federal Register, Vol. 48, No. 230, Tuesday, November 29, 1983 as well as the Organisation for Economic Co-operation and Development Guidelines for Testing Chemicals (OECD), ISBN 92-64-12221-4, adopted by the council at its 535th meeting on 12th May 1981. There were no significant deviations from the GLP Regulations which affected the quality or integrity of the study. Q.A.U. findings derived from the inspection(s) during the conduct of this study and from the audit of the final report are documented and have been provided to the study director and the test facility management.

Records Maintained: All correspondence pertinent to the study between the sponsor and Pharmakon Research International Inc., protocol, amendments to the protocol, raw data, test substance weight or volume, dispensation reports, quality assurance reports, the final report as well as microscope slides scored in the study are maintained in the Pharmakon Research International, Inc. Archives.

Test Facility Standard Operating Procedures: The methods utilized in this study are maintained in appropriate SOPs at Pharmakon Research International, Inc. and include SOPs PH-309, PH-007, PH-010, PH-020, PH-516, PH-545, PH-562 and PH-569.

PURPOSE

The purpose of this assay was to evaluate the potential of Germall II to induce micronuclei in mice pretreated by oral gavage with the test article. The Micronucleus Test detects in vivo damage to the chromosomes or mitotic apparatus by determining the presence of micronuclei in the polychromatic erythrocytes (PCE) in the bone marrow of mice. During development of an erythrocyte, the nucleus of the erythroblast is extruded and acentric fragments or lagging chromosomes may remain in the cells and become micronuclei. The cell then proceeds through a transient stage, the polychromatic erythrocyte which stains a bluish color as compared to the pink of the more mature normochromatic erythrocytes. Since micronuclei arise from chromosome fragments or chromosomes that are not incorporated into daughter nuclei at the time of cell division, the assay detects both clastogens and agents that affect the spindle apparatus(1).

Justification of Test System: Mice have historically been used in the Micronucleus Test and have been shown to exhibit micronuclei indicative of chromosome breakage(2) or lagging chromosomes. Oral administration was chosen as an acceptable alternative route to the IP route and more closely approximates the anticipated route of human exposure.

METHODS AND MATERIALS

Preparation of Control and Test Articles: Test article, Germall II, was weighed and diluted with 0.25% methylcellulose, Lot # 705259, [supplied by Fisher Scientific] (prepared in deionized water at Pharmakon Research International, Inc.). Good solutions were obtained and maintained at all levels evaluated utilizing a magnetic stir plate. The positive control, cyclophosphamide, was dissolved in 0.9% saline (Lot # 83-701-DM-01; Abbott Laboratories) and administered at 10 ml/kg at a dose of 60 mg/kg of body weight. Test article, Germall II, was administered at a dose volume of

10 ml/kg in the Micronucleus Test. The test article and positive control solutions were prepared fresh and dosed within two hours of preparation. There were no impurities expected to have been present in the vehicle control which would have affected the outcome of this assay.

Positive Control Cyclophosphamide, Lot # 114F-0393
Article: Source: Sigma Chemical Company

Dose Selection: Doses were selected for evaluation in the Micronucleus Test based on the previously reported results of an acute oral toxicity study¹ in mice on Germall II done at Pharmakon Research International, Inc. In discussion with the sponsor, doses selected for evaluation in the Micronucleus Test were 1200, 2000 and 2800 mg/kg.

MICRONUCLEUS TEST

Treatment Procedure(3,4): Seven week old CD-1 mice (male and female) were used in the study and supplied by Charles River Laboratories, Wilmington, Massachusetts. Animals were acclimated to laboratory conditions for five days prior to initiation of the assay. The albino mice were randomized by body weight and assigned to groups by use of a random number table and ear tagged. Initial body weights for the males ranged from 26-31 grams and females from 23-29 grams. Mice were housed five (5) per cage according to sex and dose group in stainless steel wire mesh cages in accordance with the "Guide for the Care and Use of Laboratory Animals" of the Institute of Laboratory Resources, National Research Council. Waste material was removed three times per week. Throughout the study, animals were fed Wayne Rodent Blox and fresh tap water was also available ad libitum. Water is monitored for contaminants at periodic intervals and the results kept on file at Pharmakon Research International, Inc. No contaminants in the food and water were expected to have been present to interfere with the outcome of the study. The experimental design(5) for the Micronucleus Test was as follows:

Group	Dose	Animals per sacrifice time		
		30 hrs.	48 hrs.	72 hrs.
0.25% methylcellulose	10 ml/kg	10	10	10
Germall II	1200 mg/kg	10	10	10
Germall II	2000 mg/kg	10	10	10
Germall II	2800 mg/kg	10	10	10
Cyclophosphamide	60 mg/kg	10	-	-

The test article was administered in single oral doses to nine groups of ten animals (5 males and 5 females/group) at 1200, 2000 or 2800 mg/kg at 10 ml/kg which were sacrificed at 30, 48 and 72 hours. Concurrently cyclophosphamide in 0.9% saline, the positive control, was administered by oral gavage to mice (5 males and 5 females) at a dose of 60 mg/kg. Thirty hours after treatment, the positive control animals were sacrificed. Groups of ten animals (5 males and 5 females) were administered the vehicle control by oral gavage at

¹PH 403-SU-001-86, October 14, 1986

10 ml/kg and sacrificed at 30, 48 and 72 hours. The time of sacrifice and cell harvest were determined from the time of treatment. All animals were sacrificed by cervical dislocation and their femora removed.

Pharmacotoxic Effects of Treatment: Animals were observed for mortality and pharmacotoxic signs immediately after dosing and at 4, 24, 48 and 72 hours after dose administration when applicable.

Animals administered Germall II at 1200 mg/kg exhibited no signs immediately after dosing. At 4, 24, 48 and 72 hours one or more animals exhibited decreased body tone. Abnormal gait was also observed occasionally at 4 and 24 hours.

At 2000 mg/kg decreased body tone was observed in several animals at all observation times. Abnormal gait was also observed in six males and three females at 24 hours.

At 2800 mg/kg decreased body tone was observed in several animals at all observation times. Approximately two-thirds of the animals at this level also exhibited abnormal gait at 4 and 24 hours. Additional signs observed at this level included vocalization to the touch in two females and one male at 4 hours, and decreased activity in two males at 4 hours.

At 2800 mg/kg, a total of three animals (all males) died during the in vivo phase of the study. One male (# 4222 in the 72 hour sacrifice group) died by 7 hours after dose administration. Gross necropsy findings for this animal indicated fluid filled, distended intestines which were dark red in color. The glandular section of the stomach contained hemorrhagic areas and was distended and the stomach was filled with clear fluid. By 24 hours two additional males were dead (# 4184 in the 48 hour sacrifice group and # 4225 in the 72 hour sacrifice group). Gross necropsy finding for # 4184 revealed distended intestines filled with red fluid and a distended stomach filled with clear fluid. The glandular section of the stomach was red in color and contained hemorrhagic areas. Gross necropsy of male # 4225 revealed a distended stomach filled with a clear fluid, and the glandular portion of the stomach was red in color. The lungs were also red in color.

No signs were observed in animals administered the positive or vehicle controls.

Slide Preparation: Both femora of each individual animal were opened carefully at the proximal end with a scissors until a small opening to the marrow canal became visible. A 1 ml tuberculin syringe filled with approximately 0.2 ml fetal bovine serum was inserted into the bone and the bone marrow was gently flushed (to assure maximum dispersion) into 1.0 ml of fetal bovine serum in a 3 ml conical centrifuge tube. The femora were flushed with fetal bovine serum until all the marrow was out and the bone appeared almost transparent. If necessary, the distal ends were opened and flushed. Bone marrow suspensions from both femora of each individual animal were pooled and treated as a single sample for slide preparation. The suspension was

centrifuged at 1000 rpm in a Sorvall RC-5 centrifuge with an HS-4 head for five minutes. The supernatant was removed leaving a small amount of fetal bovine serum with the remaining cell button. The button was mixed with a pasteur pipette to assure a homogenous mixture. A small drop of the mixture was immediately placed near the frosted end of a glass microscope slide previously cleaned in absolute ethanol and pulled behind a clean slide at a 45° angle. The slides were quick dried on a slide warmer set at approximately 56°C. Following preparation of the smears, they were dipped in absolute methanol and allowed to air dry.

Staining: The slides were stained according to the following procedure:

- a) Fix in absolute methanol - 5 minutes and air dry.
- b) Remove metallic film from surface of Giemsa working solution (5% Giemsa in pH 6.8 phosphate buffer solution) using a paper towel.
- c) Stain 20 minutes in Giemsa working solution.
- d) Rinse twice. The first rinse is in deionized water adjusted to pH 4.0 to 4.5 and the second rinse in deionized water adjusted to pH 7.0.
- e) Clean back of slide with absolute methanol.
- f) Dry on 56°C slide warmer.
- g) Clear in xylene.
- h) Mount in Permount with cover glass.

Coding of Slides: Slides were coded randomly by study number and number designation. The code was kept on a separate sheet in the sponsor's file until the slides were evaluated. Following evaluation, the slides were decoded and the code sheet was placed in the notebook. The coding of the slides was carried out by an individual not involved in the actual scoring of the study.

Criteria for Scoring Micronuclei: Micronuclei are uniform, darkly stained, typically round bodies in the cytoplasm of PCE. Occasionally, micronuclei appear almond or tear drop shaped. Inclusions in PCEs which were reflective, improperly shaped or stained, or which were not in the focal plane of the cell were judged to be artifacts and were not scored as micronuclei. Cells containing more than one micronucleus were only scored as one micronucleated PCE.

Slide Analysis: The slides were screened for good preparation, i.e. well spread, undamaged, perfectly stained. One thousand (1000) PCE per animal were counted for the presence of micronuclei. The data were expressed as the number of micronucleated PCE versus total normal PCE in 1000 total PCE per animal (Tables 1, 2 and 3).

A total of 1000 polychromatic and normochromatic erythrocytes (NCE) was also counted per animal. These data were expressed as the ratio of polychromatic erythrocytes to normochromatic erythrocytes (Tables 4, 5 and 6). For each group of ten animals designated in each dose group (Tables 1-6), male numbers 1-5 represent the first to the fifth male. Female numbers 6-10 represent the first to the fifth female in each respective group.

Statistical Evaluation: Assessment of a test article as positive is based upon its ability to produce a statistically significant increase in the number of micronucleated polychromatic erythrocytes as compared to the vehicle control. One-tailed t tests were used to make pairwise comparisons between each treatment group and its concurrent vehicle control for statistically significant increases in the number of micronucleated PCE. The ratio of polychromatic to normochromatic erythrocytes was also calculated based on 1000 erythrocytes for each animal. The proportion of polychromatic erythrocytes per 1000 erythrocytes per animal was evaluated by pairwise t tests after an arcsin transformation was performed. Statistical significance was judged at $p \leq 0.05$ and $p \leq 0.01$ levels. All comparisons were made for each sacrifice time separately comparing treated groups versus the vehicle control group.

Results: No statistically significant increases in the incidence of micronucleated PCE were detected in animals treated with Germall II at any of the sacrifice times evaluated.

A statistically significant elevation in the PCE/NCE ratio was detected in animals administered Germall II at 2800 mg/kg and sacrificed at 72 hours ($p \leq 0.05$). The significance of elevations in this ratio is unclear.

Animals treated with the positive control gave a statistically significant increase in the incidence of micronucleated PCE ($p \leq 0.01$) and a statistically significant ($p \leq 0.05$) depression of the PCE/NCE ratio.

Criteria for a Valid Test: If the spontaneous rate of micronuclei in the polychromatic erythrocytes is less than 0.5% and the positive control is statistically greater ($p \leq 0.05$) than the spontaneous and at least seven animals per group survived the treatment, the results will be deemed acceptable. This study fulfilled the criteria of a valid test.

CONCLUSION

The results for test article, Germall II, were negative in the Micronucleus Test at dose levels of 1200, 2000 and 2800 mg/kg of body weight administered in single oral doses with sacrifice times of 30, 48 and 72 hours. These findings are based upon the inability of the test article to produce a significant increase in the incidence of micronuclei per 1000 polychromatic erythrocytes per animal in the treated groups versus the vehicle control groups under the conditions of this assay.

REFERENCE:

1. Heddle, J.A., M. Hite, B. Kirkhart, K. Mavournin, J. T. MacGregor, G.W. Newell and M.F. Salamone. Induction of Micronuclei as a Measure of Genotoxicity. A Report of the U.S. Environmental Protection Agency Gene-Tox Program, 1983, Volume 123, pages 61-118.
2. Schmid, W., The Micronucleus Test, Mutation Research, 31 (1975) 9-15.

3. EPA New and Revised Health Effects Test Guidelines, Federal Register Vol. 50, No. 188, Friday, September 27, 1985.

4. Organisation for Economic Co-operation and Development Guidelines for Testing Chemicals (OECD), ISBN 92-64-12221-4, adopted by the council at its 535th meeting on 12th May, 1981.

5. Salamone, M., J. Heddle, E. Stuart and M. Katz. Towards An Improved Micronucleus Test, Mutation Research 74 (1980) 347-356.



Table 1

Micronucleus Test
SUMMARY DATA

PH 309-SU-001-86

Micronucleated PCE/1000 Polychromatic Erythrocytes/Animal

Animal Number	Controls		30 hour sacrifice		
	0.25% MC	CP (30 hr.)	Germall II		
Male	10 ml/kg	0.5 mg/kg	1200 mg/kg	2000 mg/kg	2800 mg/kg
1	3	44	1	2	1
2	0	24	0	0	0
3	2	93	1	0	2
4	2	27	1	0	2
5	0	17	0	1	1
Female					
6	1	19	5	4	0
7	1	26	3	2	3
8	1	24	1	1	1
9	3	30	2	1	1
10	1	50	0	0	0
Mean \pm S.D.	1.40 \pm 1.07	35.40 \pm 22.76	1.40 \pm 1.58	1.10 \pm 1.29	1.10 \pm 0.99
t value	-	4.719**	0	0.565	0.647

** Denotes statistical significance at $p \leq 0.01$.

Table 2

Micronucleus Test
SUMMARY DATA

PH 309-SU-001-86

Micronucleated PCE/1000 Polychromatic Erythrocytes/Animal

<u>Animal Number</u>	Controls	48 hour sacrifice		
	0.25% MC	Germall II		
Male	10 ml/kg	1200 mg/kg	2000 mg/kg	2800 mg/kg
1	3	1	0	0
2	2	2	3	0
3	0	3	1	2
4	1	3	0	Dead
5	2	1	3	3
<u>Female</u>				
6	1	1	1	2
7	1	1	3	1
8	1	0	0	5
9	0	0	1	1
10	0	0	1	0
Mean \pm S.D.	1.10 \pm 0.99	1.20 \pm 1.14	1.30 \pm 1.25	1.56 \pm 1.67
<u>t</u> value	-	0.209	0.395	0.732

Table 3

Micronucleus Test
SUMMARY DATA

PH 309-SU-001-86

Micronucleated PCE/1000 Polychromatic Erythrocytes/Animal

Animal Number	Controls	72 hour sacrifice		
	0.25% MC	Germall II		
Male	10 ml/kg	1200 mg/kg	2000 mg/kg	2800 mg/kg
1	0	4	1	1
2	1	0	2	Dead
3	2	0	0	0
4	4	1	1	0
5	0	0	0	Dead
Female				
6	1	0	1	0
7	0	1	2	1
8	0	2	1	1
9	1	0	1	0
10	1	0	1	0
Mean \pm S.D.	1.00 \pm 1.25	0.80 \pm 1.32	1.00 \pm 0.67	0.38 \pm 0.52
t value	-	0.348	0	1.322

Table 4

Micronucleus Test
SUMMARY DATA

PH 309-SU-001-86

Ratio of Polychromatic Erythrocytes to Normochromatic Erythrocytes
in 1000 Erythrocytes/Animal

Animal Number	Controls		30 hour sacrifice		
	0.25% MC	CP(30 hr.)	Germall II		
Male	10 ml/kg	60 mg/kg	1200 mg/kg	2000 mg/kg	2800 mg/kg
1	0.429	0.984	1.057	0.828	0.919
2	1.469	0.869	1.257	0.984	1.008
3	0.639	0.634	1.283	1.681	1.222
4	0.957	0.672	1.008	1.551	1.375
5	1.825	0.603	0.541	1.611	1.404
Female					
6	1.353	1.183	2.597	2.145	2.436
7	1.882	1.137	2.289	1.294	1.273
8	1.174	0.876	2.831	1.857	2.030
9	1.481	1.123	1.169	1.415	1.625
10	1.710	1.165	1.809	2.401	1.336
Mean \pm S.D.	1.29 \pm 0.49	0.92 \pm 0.23	1.58 \pm 0.76	1.58 \pm 0.48	1.46 \pm 0.46
<u>t</u> value ^a	-	2.243*	0.451	0.918	0.536

* Denotes statistically significant depression at $p \leq 0.05$.

^a t values are derived from comparisons between groups using the arcsin transformed value for the proportion of PCE for each animal and not from the tabulated values for ratios given in this table.

Table 5

Micronucleus Test
SUMMARY DATA

PH 309-SU-001-86

Ratio of Polychromatic Erythrocytes to Normochromatic Erythrocytes
in 1000 Erythrocytes/Animal

Animal Number	Controls	48 hour sacrifice		
	0.25% MC	Germall II		
Male	10 ml/kg	1200 mg/kg	2000 mg/kg	2800 mg/kg
1	1.232	1.262	0.908	1.571
2	1.433	1.874	1.128	1.146
3	1.639	1.500	1.415	1.907
4	1.778	2.096	1.410	Dead
5	2.106	2.145	1.174	1.506
Female				
6	1.273	1.358	1.551	1.632
7	1.193	1.793	2.086	1.747
8	1.558	1.653	1.445	1.392
9	2.247	1.985	1.364	2.096
10	1.564	1.959	1.488	1.564
Mean \pm S.D.	1.60 \pm 0.36	1.76 \pm 0.31	1.40 \pm 0.31	1.62 \pm 0.28
t value ^a	-	1.144	1.413	0.204

^a t values are derived from comparisons between groups using the arcsin transformed value for the proportion of PCE for each animal and not from the tabulated values for ratios given in this table.

Table 6

Micronucleus Test
SUMMARY DATA

PH 309-SU-001-86

Ratio of Polychromatic Erythrocytes to Normochromatic Erythrocytes
in 1000 Erythrocytes/Animal

Animal Number	Controls	72 hour sacrifice		
	0.25% MC	Germall II		
Male	10 ml/kg	1200 mg/kg	2000 mg/kg	2800 mg/kg
1	1.294	1.398	1.770	1.237
2	0.912	1.242	1.353	Dead
3	1.959	1.294	0.838	0.912
4	1.070	1.053	1.165	1.232
5	0.949	1.262	1.506	Dead
Female				
6	1.732	1.463	0.988	2.344
7	1.740	1.415	1.571	2.759
8	0.695	1.045	1.469	2.322
9	1.179	1.252	1.899	2.300
10	1.427	1.882	1.475	2.344
Mean \pm S.D.	1.30 \pm 0.41	1.33 \pm 0.24	1.40 \pm 0.33	1.93 \pm 0.69
<u>t</u> value	-	0.534	0.736	2.137*

* Denotes statistically significant elevation in PCE/NCE ($p \leq 0.05$).

^a t values are derived from comparisons between groups using the arcsin transformed value for the proportion of PCE for each animal and not from the tabulated values for ratios given in this table.

WAVERLY, PENNSYLVANIA 18471

QUALITY ASSURANCE UNIT STATEMENT

Study Director: Ruth M. Sorg

The following inspections were performed:

Date QAU Report Issued

11/26/86

Justin Mac
Quality Assurance

PHARMAKON RESEARCH INTERNATIONAL, INC.

WAVERLY, PENNSYLVANIA 18471

Compliance Statement

PHONE
(717) 586-2411

This study was conducted in compliance with the Principles of Good Laboratory Practice (GLP) as promulgated by the following regulatory agencies:

U.S. Food and Drug Administration, as stated in the Code of Federal Regulations, Title 21, Part 58, revised as of April 1, 1980.

U.S. Environmental Protection Agency as stated in the Federal Register, Vol. 48, No. 230, Tuesday, November 29, 1983.

Organization for Economic Co-operation and Development Guidelines for Testing Chemicals (OECD), ISBN 92-64-12221-4, adopted by the council at its 535th meeting on 12th May, 1981.

Study No.: PH 309-SU-001-86

"To the best of my knowledge, the study was conducted in accordance with applicable Good Laboratory Practice regulations; there were no deviations from these regulations that impacted on study conclusions."

Ruth M. Sorg
Study Director

December 10, 1986
Date

PHARMAKON RESEARCH INTERNATIONAL, INC.

Genetic Toxicology
Study AssignmentStudy Number: PH 309-50-001-86 Protocol Available yes no (circle)Study Description: Cytogenetic Assay - Micronucleus TestStudy Director: Ruth M. Sorg M.S. (Hyg.) PRITechnical Performance: Nancy Bongliowski, Nina Hadwin, Susan M. Lucenti B.S. and Ruth M. Sorg M.S. (Hyg.)Standard Operating Procedure: PH 309Sponsor: Sutton Laboratories, Inc.
Chatham, New Jersey 07928Monitor: James V. Porter, Jr., Ph.D.Test Article: Germall II Lot No. GT-152Physical Description: White PowderDate of Study Assignment from Quality Assurance: 10-9-86Study Initiation: 10-21-86Study Completion: 11-21-86Solubility: Soluble in 0.25% methylcelluloseSponsor's Suggestion? yes no (circle)Solubility Assay Conducted: yes no (circle)Vehicle (Solvent): 0.25% methylcellulosePreliminary Toxicity Form #: Not applicableComments: Exp
Methylcellulose Lot #705259 - Compound prep 0.25% MC
1.25gm Methylcellulose 10/17/86
500 ml D₂O Expiration date 10/31/86Study Director: Ruth M. SorgDate: 11-21-86

PHARMAKON RESEARCH INTERNATIONAL, INC.

TITLE: Cytogenetic Assay - Micronucleus Test

STUDY NO. PH 309-JU-001-86Sponsor: Sutton Laboratories, Inc.Date Initiated: 10-21-86Test Article: Guemall IIDate Terminated: 11-21-86Description: White Powder

Purpose: To evaluate the potential of the test article to induce micronuclei when administered to mice.

Dose Levels Evaluated: Based on the acute oral toxicity study in mice done at PRI, and in discussion with the sponsor, doses selected for evaluation were 1200, 2000 and 2800 mg/kg.

Sacrifice Times: 30, 48 and 72 hoursVehicle: 0.25% methylcellulose Lot # 705259Volume Administered: 10 ml/kgRoute of Administration: OralFasting: Approximately 4 hours before dosing
Food returned immediately after dosingSource: Fisher Scientific

5 AM - CP 41012-4109

5:30 AM MC 30, 48, 72 hr

6 AM 1200 mg/kg 30, 48, 72 hr

6:30 AM 2000 mg/kg 30, 48, 72 hr

7 AM 2800 mg/kg 30, 48, 72 hr

Species: MouseStrain: CD-1 16 20 M/SAnimal P.O. # 041585 F TOXDate Rec'd: 10/16/86 11-25-86Age at initiation: 7 weeksBirth Date: 8/31/86No. of Animals per group: 10Males 5 Females 5Randomization: By weight and random number Table.Animal Identification: Ear tagged and steel cages marked.Food Lot # PO 9166Date Rec'd: 10-7-86Type: Wayne Rodent BloAnimal Scale #: Sartorius 8Calibrated: dailyStudy Room # Tox VILight Cycle Checked: 10/21/86 M/S 12 hrs. light, 12 hrs. dark

Temperature and humidity: Constantly monitored and recorded with a Honeywell
Relative Humidity and Temperature Recorder Model 61, week of 10/10/86 - 10/24/86 and 10/27/86

Fetal Bovine Serum:

30 hr groups: lots 10-22-86
48 hr lot 30044972 hr lot 300504

T. J. Grogan 11/21/86
Investigator Date

Lucretia M. Song 11-21-86
Study Director Date

TITLE: Cytogenetic Assay - Micronucleus Test

STUDY NO PH 309-5U-001-86

Sponsor: Sutton Laboratories, Inc

Date Initiated: 10-21-86

Test Article: Germall II

Date Terminated: 11-21-86

Description: White Powder

TEST ARTICLE PREPARATION

Germall II Lot # GT-152

PHS 10-21-86 1200 mg/kg @ 10 ml/kg → 120 mg/ml
2400 mg Germall II go to 20 ml with 0.25% methylcellulose

PHS 10-21-86 2000 mg/kg @ 10 ml/kg → 200 mg/ml
4000 mg Germall II go to 20 ml with 0.25% methylcellulose

PHS 10-21-86 2800 mg/kg @ 10 ml/kg → 280 mg/ml
5600 mg Germall II go to 20 ml with 0.25% methylcellulose

Compound Preparation Scale # Sartorius II
1602 mp

Calibrated: 10-21-86

Comments: Test article weighed in mortar (tared to 0.000 gm) and a small amount of 0.25% mc was added to suspend the compound. Suspension transferred to pharmaceutical graduated cylinder and go to the appropriate volume with 0.25% mc. Suspension/solution vortex mixed and immediately transferred to original mortar for dosing. Mixture continuously stirred on magnetic stir plate during dosing phase. PHS 10-21-86. An 2 ml sample of each dose was taken immediately after preparation - PHS 10-21-86

Samples sent: yes no

Date sent: 10/21/86

Dose preparation formed: a solution

Investigator Nancy Dongleusk 11/21/86
 Date

at all levels evaluated

Total Germall II used: 12.0 gms
10-21-86 PHS

Study Director Ruth M. Sog 11-21-86
 Date

TITLE: Cytogenetic Assay - Micronucleus Test

STUDY NO. PH309-SU-001-86

Sponsor: Sutton Laboratories, Inc.

Date Initiated: 10-21-86

Test Article: Germall II

Date Terminated: 11-21-86

Description: White powder

TEST ARTICLE PREPARATION

- Positive Control

Cyclophosphamide (CP) @ 60 mg/kg @ 10 ml/kg → 6 mg/ml.

pus
10-21-86

6.7338 gm vial + CP

6.6430 gm vial

0.0908 gm CP = 90.8 mg CP

90.8 mg CP

6 mg/ml

15.1 ml 0.9% Saline.

CP Lot # 114F-0393 Sigmachem Chemical Co.

0.9% Saline Lot # 83-701-DM-01 Abbott Laboratories, North
Chicago Illinois

Compound Preparation Scale # Sartorius V
1602 mp

Calibrated: 10/21/86

Comments: CP weighed in tared glass vial and diluted to appropriate volume with 0.9% Saline in 50 ml tube.

Samples sent: yes ☒ (no)

Date sent: N/A

Dose preparation formed: Solution

Manas Singh 11/21/86
Investigator Date

Ruth M. Song 11-21-86
Study Director Date

1123

TITLE	Cytogenetic Assay - Micronucleus Test

STUDY NUMBER: 74389-50-001-86

Putnam Laboratories

Date Initiated:

0/21/82

Summ II

Date Terminated:

21-86

White Powder

Dose

210

Observations: Immediate:

Immediate:

developed

AMPLE TIME:

30 Apr

Mouse No.	Sex	Initial Wt. (gm)	ml admin.	Time admin.	Final Wt. (gm)	Date of Sacrifice	No. of PCE	No. of PCE with Micronuclei
4101	♂	29	.29	1 ⁰⁰ AM	32	1	956	44
4102	♂	30	.30		32	10	976	24
4103	♂	27	.27		27		907	93
4104	♂	29	.29		30	22	973	27
4105	♂	28	.28		30		983	17
4106	♀	24	.24		25		981	19
4107	♀	24	.24		25	86	974	26
4108	♀	24	.26		26		976	24
4109	♀	28	.28	↓	29	1	970	30
4110	♀	24	.26	9 ⁰⁵ AM	26		950	59
		10/21/84	10/21/84	10-21-84	10-22-86	11/21/86		11/21/86

W. H. Jackson 10/21/84

Mean: 35,400 ± 22,755

t values:

2010

Doged by:

W. H. Jackson 10/21/84

5

111

2

Threatened
1166/662

1757-78

Date / 11/24/20

2

2

PHARMAKON RESEARCH INTERNATIONAL, INC.

STUDY SHEET SINGLE DOSE

TITLE Cytogenetic Assay - Micronucleus Test

STUDY NUMBER: PH 309-50-001-86

Sponsor: SmithKline LaboratoriesDate Initiated: 10/21/86Test Article: Remell IIDate Terminated: 11-21-86Description: 2 keto steroidsDose Level: C 10 and 100Observations: Immediate!DOSE: MCSAMPLE TIME: 30 hours

Mouse No.	Sex	Initial Wt. (gm)	ml admin.	Time admin.	Final Wt. (gm)	Date of Sacrifice	No. of PCE	No. of PCE with Micronuclei
4111	♂	30	.30	9 ³⁰	32		997	3
4112	♂	29	.29		31	10	1000	0
4113	♂	29	.29		31		998	2
4114	♂	29	.29		31		998	2
4115	♂	31	.31		32	22	1000	0
4116	♀	27	.27		28		999	1
4117	♀	25	.25		26		999	1
4118	♀	26	.24		28	80	999	1
4119	♀	24	.24		25		997	3
4120	♀	26	.26	1 ³⁰	27		999	1
		20/21/86	10/21/86	10-21-86	RMS	RMS	11/21/86	11-21-86

Dosed by: Nira Madson10/21/86Mean: 1,400 ± 1,074t values:

Investigator

Marcelle Stenger-Allen

Date

Page 93

Study Director

Luella H. Song

Date

11-21-86

STUDY SHEET SINGLE DOSE

TITLE Cytogenetic Assay - Micronucleus Test

STUDY NUMBER: PH309-30-001-86

Sponsor: Lutten Laboratories

Date Initiated: 10-21-86

Test Article: Gemall II

Date Terminated: 11-21-86

Description: White Powder

Dose Level: 200 mg/kg C 10 ml/kg - 2120 mg/m

Observations: Immediate:

DOSE: 1200 mg/kg 30 hours

10% animals. no signs 10-21-86
4 hrs post: 1/50 decreased body ton
4/50 5/50 no signs 10/21/86 NG
24 hrs post: 1/50 1/50 decreased body
tone 4/50 2/50 4/50 4/50 no signs 8
10-21-86, 10-22-86

Mouse No.	Sex	Initial Wt. (gm)	ml admin.	Time admin.	Final Wt. (gm)	Date of Sacrifice	No. of PCE	No. of PCE with Micronuclei
4121	♂	31	.31	10 AM	32		999	1
4122	♂	31	.30		31	10	1000	0
4123	♂	28	.28		28		999	1
4124	♂	31	.31		32	22	999	1
4125	♂	29	.29		31		1000	0
4126	♀	25	.25		25		995	5
4127	♀	25	.25		25	86	997	3
4128	♀	26	.26		26		999	1
4129	♀	25	.25		26		998	2
4130	♀	27	.27	10 AM	27		1000	0
		Initial Wt. (gm)	ml admin.	Time admin.	Final Wt. (gm)	Date of Sacrifice	No. of PCE	No. of PCE with Micronuclei
		10-21-86	10-21-86	10-21-86	10-22-86	10-22-86	11-21-86	11-21-86

Mean: 1.400 ± 1.577

t values: 0

Dosed by: Ray Madson 10/21/86

Investigator: Harvey S. Glick 10/21/86
Date

Study Director: Paul M. Sorg 10-21-86
Date

STUDY SHEET SINGLE DOSE

TITLE Cytogenetic Assay - Micronucleus Test

STUDY NUMBER: PH309-5U-001-86

Sponsor: Autism's Advocates

Date Initiated: 10-21-86

Test Article: *General II*

Date Terminated: 11-21-86

Description: *Hydrofoeder*

Dose Level: 2000 mg/kg @ 10 ml/kg $\rightarrow 200 \text{ mg/ml}$

Observations: Immediate:

[illegible]

Mean: 1.100 ± 1.286

t values: 0.565

Dosed by:

Investigator Nancy Gargiulewski Date 1/21/76

Ruth M. Song 11-21-86
Study Director Date

STUDY SHEET SINGLE DOSE

TITLE Cytogenetic Assay - Micronucleus Test

STUDY NUMBER: PH309-3U-001-86

Sponsor: Sutton Laboratories

Date Initiated: 11-21-86

Test Article: Gemcell II

Date Terminated: 11-21-86

Description: White Powder

Dose Level: 2800 mg/kg Cumulative → 280 mg/kg

Observations: Immediate:

DOSE: 2800 mg/kg SAMPLE TIME: 30 hours

1/5 ♂ no signs; 1/5 ♀ decreased body tone 10-21-86
 4/5 ♂ decreased body tone + abnormal gait 2/5 ♂ abnormal gait 2/5 ♂ no signs 1/5 ♀ decreased body tone abnormal gait 1/5 ♀ abnormal gait 1/5 ♀ vocalization on touch 2/5 ♀ no signs 10/21/86
 2/5 ♂ decreased body tone abnormal gait 1/5 ♂ abnormal gait 1/5 ♂ decreased body tone 1/5 ♀ decreased body tone 1/5 ♀ abnormal gait 2/5 ♀ no signs 10/21/86

Mouse No.	Sex	Initial Wt. (gm)	ml admin.	Time admin.	Final Wt. (gm)	Date of Sacrifice	No. of PCE	No. of PCE with Micronuclei
4141	♂	27	.27	11 AM	28		999	1
4142	♂	30	.30		31	10	1000	0
4143	♂	29	.29		30	22	998	2
4144	♂	28	.28		28		998	2
4145	♂	31	.31		32	86	999	1
4146	♀	27	.27		28		1000	0
4147	♀	25	.25		24		997	3
4148	♀	24	.24		25		999	1
4149	♀	25	.25		27		999	1
4150	♀	28	.28	12 AM	28		1000	0
		AML 10-21-86	AML 10-21-86	AML 11-21-86	AML 10-22-86	AML 10-22-86	AML 11-21-86	AML 11-21-86

Mean: 1.100 ± 0.994

t values: 0.647

Dosed by: K. Madson 10/21/86

Investigator: Margaret K. 11/21/86

Study Director: Ruth M. Sorey 11-21-86

PHARMAKON RESEARCH INTERNATIONAL, INC.

NOTEBOOK # 1123

STUDY SHEET SINGLE DOSE

TITLE Cytogenetic Assay - Micronucleus Test STUDY NUMBER: PH 309-5U-001-86

Sponsor: Butterfield Laboratories Date Initiated: 10/21/86
 Test Article: Desmethyl II Date Terminated: 11-21-86
 Description: White, Powdered Dose Level: @ 10 ml/kg

Observations: Immediate:

1% animals - no signs ^{ML} 10/21/86
 48h post: 10/10 no signs ^{ML} 10/21/86
 24h post: 10/10 no signs ^{ML} 10/23/86
 48h post: 10/10 no signs ^{ML} 10/23/86

SAMPLE TIME: 48 hours

Mouse No.	Sex	Initial Wt. (gm)	ml admin.	Time admin.	Final Wt. (gm)	Date of Sacrifice	No. of PCE	No. of PCE with Micronuclei
4151	♂	31	.31	9 AM	34	1	997	3
4152	♂	28	.28		31	10/	998	2
4153	♂	30	.30		34		1000	0
4154	♂	30	.30		33	12/	999	1
4155	♂	30	.30		32	3/	998	2
4156	♀	25	.25		27	18/	999	1
4157	♀	24	.26		28	8/	999	1
4158	♀	26	.26		29	6	999	1
4159	♀	28	.28		31		1000	0
4160	♀	27	.27	9 AM	29		1000	0
		10/21/84	10/24/84	10/21/86	10/23/86	10/23/86	11/21/86	11/21/86

Mean: 1.100 ± 0.999 ⁴ ₁₀₀₀₀

t Values:

Dosed by: Yuan, Macdonald 10/21/86

Investigator Nancy Hong 11/21/86
 Date

Study Director Paul M. Soy 11-21-86
 Date

STUDY SHEET SINGLE DOSE

TITLE Cytogenetic Assay - Micronucleus Test STUDY NUMBER: 74309-50-001-86

Sponsor: Sutton Laboratories Date Initiated: 10-21-86

Test Article: Genomally II Date Terminated: 11-21-86

Description: White Powder Dose Level: 1200 mg/kg, C 10 ml/kg, 1200 mg/ml

Observations: Immediate:

10% animals - no signs 10-21-86

4 hrs pd: 1/5 ♂ 4/5 1/5 ♀ normal gait

1/5 ♀ decreased body tone 3/5 ♀

no signs 1/5 ♂ decreased

body tone 4/5 ♂ no signs no

10/21/86

2 hrs pd: 2/5 ♂ decreased body tone

abnormal gait 3/5 ♂ no signs

1/5 female decreased body

tone abnormal gait 4/5 ♀ no signs

7/5 10/22/86

48 hrs pd: 5/5 ♂ 5/5 ♀ no signs 7/5 10/23/86

Mouse No.	Sex	Initial Wt. (gm)	ml admin.	Time admin.	Final Wt. (gm)	Date of Sacrifice	No. of PCE	No. of PCE with Micronuclei
4161	♂	26	.26	12 AM	29	10/21/86	999	1
4162	♂	31	.31		32	10/21/86	998	2
4163	♂	29	.29		33	10/21/86	997	3
4164	♂	29	.29		33	10/21/86	997	3
4165	♂	29	.29		31	10/21/86	999	1
4166	♀	26	.26		28	10/21/86	999	1
4167	♀	27	.27		28	10/21/86	999	1
4168	♀	26	.26		28	10/21/86	1000	0
4169	♀	27	.27		27	10/21/86	1000	0
4170	♀	25	.25	10 AM	26	10/21/86	1000	0
		10-21-86	10-21-86	10-21-86	10/23/86	10/23/86	11-21-86	11-21-86

Mean: 1.200 ± 1.135

t values: 0.209

Dosed by: New Macdon 10/21/86

Investigator: Margaret St. Regis Date: 10/21/86

Study Director: Paul M. Song Date: 11-21-86

TITLE Cytogenetic Assay - Micronucleus Test

STUDY NUMBER: P4309-50-001-82

Autonomous Laboratories

10-21-86

Germany II

11-21-82

White Powder

Dose Level: 200 mg/kg - 200 mg/kg \rightarrow 200 mg/kg

Observations: Immediate:

DOSE: 2000 mg/kg

Mouse No.	Sex	Initial Wt. (gm)	ml admin.	Time admin.	Final Wt. (gm)	Date of Sacrifice	No. of PCE	No. of PCE with Micronuclei
4171	♂	21	.29	10 AM	31	10/1	1000	0
4172	♂	31	.31		33	10/1	997	3
4173	♂	29	.29		31	10/1	999	1
4174	♂	28	.28		32	10/1	1000	0
4175	♂	30	.30		33	10/1	997	3
4176	♀	25	.25		26	10/1	999	1
4177	♀	25	.25		28	10/1	997	3
4178	♀	26 26 1000	.26 1000		28	10/1	1000	0
4179	♀	25	.25	10 AM	28	10/1	999	1
4180	♀	26 26	.26 26	10 AM 10 AM	28 28	10/23/86 10/23/86	999 999	1 1

Mean: $1,300 \pm 1,251$

t values: 0.395

Dosed by:

Investigator Nancy Sorychewski 11/2/89 Date 11/2/89

Study Director Russ M. Sarg Date 11-21-86

STUDY SHEET SINGLE DOSE

TITLE Cytogenetic Assay - Micronucleus Test

STUDY NUMBER: PH 309-50-001-66

Sponsor: Autonomous Laboratories

Test Article: Quercetin

Description: White Powder

Date Initiated: 10-21-86

Date Terminated: 11-21-86

Dose Level: 2800 mg/kg C. 10 ml/kg → 280 mg/ml

Observations: Immediate:

DOSE: 2800 mg/kg SAMPLE TIME: 48 Hours

Mouse No.	Sex	Initial Wt. (gm)	ml admin.	Time admin.	Final Wt. (gm)	Date of Sacrifice	No. of PCE	No. of PCE with Micronuclei
4181	♂	30	.30	11 ¹⁵ AM	32	10/1	1000	0
4182	♂	27	.27		29	1231	1000	0
4183	♂	29	.29		31	186	998	2
4184	♂	29	.29		28	10/22/86		
4185	♂	29	.29		31	10/1	997	3
4186	♀	26	.26		28	10/1	998	2
4187	♀	25	.25		25	1231	999	1
4188	♀	28	.28		27		995	5
4189	♀	25	.25		27	186	999	1
4190	♀	25	.25	11 ¹⁷ AM	24	1	1000	0
		24L 10-21-86	24L 10-21-86	24L 10-21-86	25 10/23/86	720 10/23/86	11-21-86	11-21-86

Dosed by: W. Madison 10/21/86

4/50 1/5 1/5 decreased body tone
no signs in remaining 29 animals
4/50 1/5 1/5 abnormal gait, decreased body tone 1/50 abnormal gait, vocalization on touch 3/50 abnormal gait
5/50 abnormal gait 1/50 vocalization on touch, 1/50 decreased body tone
24/10/21/86 418407 Neurology Abnormal distended v. fluid filled (clear)
Bladder distended red in color
penicillin/adrenal. Intestine distended
fluid filled (red) NM
12/4/86 4/50 abnormal gait 1/50 decreased body tone 4/50 abnormal gait 1/50 no signs
48 hrs 3/40 1/50 decreased body tone 1/40 3/50 no signs 10/10/28/86

Mean: 1.555 ± 1.666

t values: 0.732

Investigator: Nancy Hengstler 11/21/86
Date

Study Director: Robert H. Jorg 11-21-86
Date

PHARMAKON RESEARCH INTERNATIONAL, INC.

STUDY SHEET SINGLE DOSE

TITLE Cytogenetic Assay - Micronucleus Test

STUDY NUMBER: 74-309-30-001-86

Sponsor: Sutton Laboratories

Date Initiated: 10/21/86

Test Article: Gemmal II

Date Terminated: 11-21-86

Description: White Powder

Dose Level: 0.10 ml/kg

Observations: Immediate:

DOSE: MC

SAMPLE TIME: 72 Hours

Mouse No.	Sex	Initial Wt. (gm)	ml admin.	Time admin.	Final Wt. (gm)	Date of Sacrifice	No. of PCE	No. of PCE with Micronuclei
4191	♂	29	.29	1 AM	33		1000	0
4192	♂	28	.28		30		999	1
4193	♂	29	.29		32	10/24	998	2
4194	♂	30	.30		33		996	4
4195	♂	30	.30		34		1000	0
4196	♀	25	.25		28		999	1
4197	♀	24	.24		26		1000	0
4198	♀	25	.25		23		1000	0
4199	♀	26	.26		28		999	1
4200	♀	26	.26	1 AM	27		999	1
		gm 10/21/86	gm 10/21/86	gm 10/21/86	gm 10/24/86	gm 10/24/86	gm 11-21-86	gm 11-21-86

Dosed by: New Madison 10/21/86

Investigator: Nancy Stordewich Date: 11/21/86

Study Director: Aust M. Borg Date: 11-21-86

STUDY SHEET SINGLE DOSE

TITLE Cytogenetic Assay - Micronucleus Test

STUDY NUMBER: 74349-30-001-86

Sponsor: Autotax Laboratories
 Test Article: Germell II
 Description: White Powder

Date Initiated: 10-21-86
 Date Terminated: 11-21-86
 Dose Level: 1200 mg/kg C-10 mg/kg → 120 mg/kg

Observations: Immediate:

10/10 animals. no signs det. 10-21-86

4/100 pd: 1/5 ♂ decreased body

tone 4/5 ♂ 5/5 ♀ no signs 10/21/86

24 hr pd: 1/5 ♂ decreased body tone

4/5 ♂ 5/5 ♀ no signs 10/22/86

48 hr pd: 1/5 ♂ 1/5 ♀ decreased body

tone 4/5 ♂ 4/5 ♀ no signs 10/24/86

72 hr pd 2/5 ♂ 1/5 ♀ decreased body

tone 3/5 ♂ 4/5 ♀ no signs 10/24/86

DOSE: 1200 mg/kg SAMPLE TIME: 72 Hours

Mouse No.	Sex	Initial Wt. (gm)	ml admin.	Time admin.	Final Wt. (gm)	Date of Sacrifice	No. of PCE	No. of PCE with Micronuclei
4201	♂	30	.30	11 AM	34	1	996	4
4202	♂	28	.28		31		1000	0
4203	♂	27	.27		31	10/	1000	0
4204	♂	29	.29		32	124/	999	1
4205	♂	30	.30		32	84	1000	0
4206	♀	26	.26		28	1	1000	0
4207	♀	25	.25		28	1	999	1
4208	♀	29	.29		28	1	998	2
4209	♀	26	.26	↓	30	1	1000	0
4210	♀	27	.27	10 AM	28	10/24/86	1000	0
		10-21-86	10-21-86	10-21-86	10/24/86	10/24/86	11-21-86	11-21-86

Mean: 0.800 ± 1.316

t Values: 0.348

Dosed by: Mira Madelon 10/21/86

Investigator: Nancy K. Kohn 11/21/86

Study Director: Paul H. Song 11-21-86

PHARMAKON RESEARCH INTERNATIONAL, INC.

NOTEBOOK # 1123

STUDY SHEET SINGLE DOSE

TITLE Cytogenetic Assay - Micronucleus Test

STUDY NUMBER: 4-329-SU-001-86

Sponsor: SmithKline Laboratories

Date Initiated: 10-21-86

Test Article: Gemvill H

Date Terminated: 11-21-86

Description: White Powder

Dose Level: 2000 mg/kg @ 10 ml/kg → 200 mg/ml

Observations: Immediate:

DOSE: 2000 mg/kg SAMPLE TIME: 72 Hours

1/5 2/5 decreased body tone;
no signs in remaining 2 and 3 animals
4 hrs pd: 1/5 2/5 decreased body tone
body tone 4/5 3/5 1/5 no signs
24 hrs pd: 1/5 2/5 decreased body tone
body tone 4/5 3/5 1/5 no signs
48 hrs pd: 3/5 2/5 decreased body tone
body tone 4/5 3/5 1/5 no signs
72 hrs pd: 3/5 2/5 decreased body tone
body tone 4/5 3/5 1/5 no signs
2/5 3/5 1/5 no signs

Mouse No.	Sex	Initial Wt. (gm)	ml admin.	Time admin.	Final Wt. (gm)	Date of Sacrifice	No. of PCE	No. of PCE with Micronuclei
4211	♂	30	.30	45	32	1	999	1
4212	♂	28	.28		33	1	998	2
4213	♂	29	.29		32	10/1	1000	0
4214	♂	31	.31		33	124/1	999	1
4215	♂	28	.28		31	86	1000	0
4216	♀	27	.27		28	1	999	1
4217	♀	26	.26		28	1	998	2
4218	♀	24	.24		27	1	999	1
4219	♀	27	.27		29	1	999	1
4220	♀	25	.25	45	27	1	999	1
		24	.24	10	24	10/24/86	11-21-86	11-21-86

Mean: 1.000 ± 0.666

t Values: 0

Dosed by: W. Maclean 10/21/86

Investigator: Nancy Sengul Date: 11/21/86

Study Director: Paul H. Eng Date: 11-21-86

PHARMAKON RESEARCH INTERNATIONAL, INC.

STUDY SHEET SINGLE DOSE

TITLE Cytogenetic Assay - Micronucleus Test

STUDY NUMBER: PH 309-50-001-86

Sponsor: Shuttle Laboratories

Test Article: Genesol II

Description: White Powder

Date Initiated: 10-21-86

Date Terminated: 11-21-86

Dose Level: 2800 mg/kg C1000/kg → 2800 mg/kg

Observations: Immediate:

DOSE: 2800 mg/kg SAMPLE TIME: 72 Hours

3/5 ♂ 5% decreased body tone;
no signs of hemiparesis of animal, 10-21-86
4/20 p.d. 1/3 ♂ decreased body tone
abnormal gait 3/5 ♂ abnormal
gait 3/5 ♂ 10/22/86 2/5 ♂ no sign-
2/5 ♂ decreased activity, abnor-
mal gait, decreased body tone,
tremors, 4/5 ♂ decreased body
tone, abnormal gait 1/5 ♂ no
signs 26.9/22/86
1/5 ♂ dead 7 days post-dose # 42220
Necropsy - Glomerular section of
stomach contained hemorrhagic
area, distended spleen filled
(clear) intestines distended,
dark red in color, fluid
filled. NM 10/21/86
10/21/86 # 42225 ♂ dead 7 days
post-dose spleen filled (clear)
lung red and edematous. NM 10/22/86
Mean: 2800 mg/kg C1000/kg
H & A done 10-31-86
E values: 1, 3, 2, 2

Mouse No.	Sex	Initial Wt. (gm)	ml admin.	Time admin.	Final Wt. (gm)	Date of Sacrifice	No. of PCE	No. of PCE with Micronuclei
4221	♂	27	.27	" AM	29	10/21/86	999	1
4222	♂	27	.27	" AM	27.4	10/21/86	---	---
4223	♂	30	.3	" AM	33	10/21/86	1000	0
4224	♂	29	.29	" AM	32	10/21/86	1000	0
4225	♂	30	.30	" AM	28	10/22/86	---	---
4226	♀	24	.24	" AM	26	10/21/86	1000	0
4227	♀	26	.26	" AM	28	10/21/86	999	1
4228	♀	24	.24	" AM	26	10/21/86	999	1
4229	♀	24	.24	" AM	25	10/21/86	1000	0
4230	♀	26	.26	" AM	27	10/21/86	1000	0
		NAL	.44L	NAL	NAL	10/21/86	NAL	NAL

Dosed by: Gina M. Adams 10/21/86

Observations: 24 hrs p.d. 3/5 ♂ abnormal gait 1/3 ♂ decreased body tone
1/5 ♂ 1/5 ♂ abnormal gait decreased body tone 10/21/86

Investigator: Nancy Longmire 11/21/86

Study Director: Frank H. Seg 11-21-86

Page: 4 of 4

SCORING SHEET

PHARMAKON RESEARCH INTERNATIONAL, INC.

TITLE: Cytogenetic Assay - Micronucleus Test

STUDY NO. PH309-5U-001-86

Sponsor: Sutton Laboratories, Inc

Values obtained from coded slides and subsequent decoding of test article

Small II

Code		Polychromatic Erythrocytes	Polychromatic Erythrocytes with Micronuclei		Decode
1	10/29/86 72h	998	2	MC	72h 41938
2		1000	0	2000 mg/Kg	72h 42158
3		950	50	CP	30h 41109
4		999	1	1200 mg/Kg	48h 41658
5		999	1	2000 mg/Kg	48h 41809
6	✓	999	1	1200 mg/Kg	72h 42079
7	10/29/86 72h	999	1	2000 mg/Kg	72h 42189
8	10/30/86 72h	999	1	2800 mg/Kg	30h 41418
9		995	5	1200 mg/Kg	30h 41269
10		1000	0	2000 mg/Kg	48h 41748
11		998	2	MC	30h 41148
12		998	2	MC	48h 41528
13		999	1	2800 mg/Kg	72h 42279
14		1000	0	2000 mg/Kg	30h 41328
15		1000	0	2000 mg/Kg	30h 41338
16	✓	999	1	MC	48h 41569
17	10/30/86 72h	1000	0	1200 mg/Kg	48h 41699

Nancy Longfellow 10/30/86
Investigator Date

Kurt M. Song 11-21-86
Study Director Date

SCORING SHEET

PHARMAKON RESEARCH INTERNATIONAL, INC.

TITLE: Cytogenetic Assay - Micronucleus Test

STUDY NO. PH-309-50-101-86Sponsor: Sutton Laboratories, Inc.

Values obtained from coded slides and subsequent decoding of test article

Sumall II

Code	Polychromatic Erythrocytes	Polychromatic Erythrocytes with Micronuclei	Decode
18.10/30/86 NY	976	24	CP 30hr 41020 1200 mg/kg 48hr 41699 IDE 2800 mg/kg 30hr 41479 NG 11/20/86
19.10/30/86 NY	997	3	CP 30hr 41020 3800 mg/kg 48hr 41830 NG 2800 mg/kg 30hr 41479 IDE
20.10/31/86 NY	998	2	MC 48hr 41609 NG 11/20/86 2800 mg/kg 48hr 41830 IDE 1200 mg/kg 48hr 41689 NG 11/20/86
21.	1000	0	MC 48hr 41609 NG 11/20/86 2800 mg/kg 48hr 41830 IDE 1200 mg/kg 48hr 41689 NG 11/20/86
22	1000	0	MC 48hr 41609 NG 11/20/86 2800 mg/kg 48hr 41830 IDE 1200 mg/kg 48hr 41689 NG 11/20/86
23	1000	0	1200 mg/kg 72hr 42020 NG 11/20/86 2800 mg/kg 48hr 41830 IDE 1200 mg/kg 48hr 41689 NG 11/20/86
24	973	27	CP 30hr 41040 1200 mg/kg 72hr 42020 IDE 2000 mg/kg 30hr 41389 NG
25.	999	1	CP 30hr 41040 2000 mg/kg 30hr 41389 IDE 1200 mg/kg 72hr 42069 NG 11/20/86
26	1000	0	1200 mg/kg 72hr 42069 NG 11/20/86 2000 mg/kg 30hr 41389 IDE 2000 mg/kg 48hr 41779 NG 11/20/86
27.	997	3	1200 mg/kg 72hr 42069 IDE 11/20/86 2000 mg/kg 48hr 41779 NG 2000 mg/kg 30hr 41310
28.	998	2	2000 mg/kg 30hr 41310
29.	999	1	2800 mg/kg 48hr 41899
30. ↓	997	3	2000 mg/kg 48hr 41750
31.10/31/86 NY	999	1	1200 mg/kg 30hr 41210
32. 11/3/86 NY	999	1	1200 mg/kg 30hr 41240
33. ↓	999	1	MC 30hr 41189
34. 11/3/86 NY	41000	0	2000 mg/kg 48hr 41710

1 DE NG 11/3/86

Nancy Englund 11/3/86
Investigator DateRuth M. Jorg 11-21-86
Study Director Date

SCORING SHEET

PHARMAKON RESEARCH INTERNATIONAL, INC.

TITLE: Cytogenetic Assay - Micronucleus Test

STUDY NO. PH 309-50-101-86

Sponsor: Sutton Laboratories, Inc.

Values obtained from coded slides and subsequent decoding of test article

Gumell II

Code		Polychromatic Erythrocytes	Polychromatic Erythrocytes with Micronuclei		Decode
35	11/3/86 NS	1000	0	MC	48hr 41530
36		1000	0	1200 mg/kg	72hr 42107
37		999	1	2800 mg/kg	30hr 41487
38		999	1	1200 mg/kg	30hr 41287
39		995	5	2800 mg/kg	48hr 41887 42277 ^{15E} 11/20/86
40	✓	996	4	2000 mg/kg	30hr 41320 ^{15E} 11/20/86
41	11/3/86 NS	996	4	2000 mg/kg ^{15E} MC 11/20/86	72hr 41940
42	11/4/86 NS	956	44	CP	30hr 41010
43		1000	0	2800 mg/kg	30hr 41467
44		998	2	2000 mg/kg	72hr 42120
45	✓	999	1	MC	30hr 41207
46	11/4/86 NS	997	3	1200 mg/kg	48hr 41640
47	11/5/86 NS	997	3	2800 mg/kg	48hr 41850
48		997	3	MC	30hr 41197
49		999	1	2000 mg/kg	72hr 42110
50	✓	999	1	MC	72hr 42007
51	11/5/86 NS	1000	0	2800 mg/kg	72hr 42307

Nancy Englehart 11/15/86
Investigator Date

Ruth M. Song 11-21-86
Study Director Date

SCORING SHEET

PHARMAKON RESEARCH INTERNATIONAL, INC.

TITLE: Cytogenetic Assay - Micronucleus Test STUDY NO. PH309-SU-001-86

Sponsor: Sutton Laboratories, Inc

Values obtained from coded slides and subsequent decoding of test article

Samuel II

Code	Polychromatic Erythrocytes	Polychromatic Erythrocytes with Micronuclei	Decode
52 11/5/86 NY	1000	0	2000 mg/kg 48hr 41789
53	999	1	1200 mg/kg 72hr 42040
54	999	1	2000 mg/kg 48hr 41799
55 11/5/86 NY	999	1	7mc 72hr 41969
56 11/6/86 NY	1000	0	7mc 72hr 41979
57	999	1	1200 mg/kg 48hr 41679
58	998	2	1200 mg/kg 72hr 42089
59	999	1	2800 mg/kg 30hr 41450
60	907	93	CP 30hr 41030
61	1000	0	2800 mg/kg 72hr 42299
62	999	1	2000 mg/kg 30hr 41399
63	1000	0	7mc 72hr 41910
64	999	1	2000 mg/kg 72hr 42209
65	999	1	1200 mg/kg 48hr 41610
66	9973		2000 mg/kg 48hr 41720
67	1000	0	1200 mg/kg 72hr 42050
68 11/6/86	999	1	7mc 48hr 41589

Nancy Dongliu 11/6/86
Investigator Date

Ruth M. Seng 11-21-86
Study Director Date

SCORING SHEET

PHARMAKON RESEARCH INTERNATIONAL, INC.

TITLE: Cytogenetic Assay - Micronucleus Test STUDY NO. PH-309-SU-001-86

Sponsor: Sutton Laboratories, Inc.

Values obtained from coded slides and subsequent decoding of test article Small II

Code	Polychromatic Erythrocytes	Polychromatic Erythrocytes with Micronuclei	Decode
69. 11/6/86 NY	983	17	C.P. 30hr 41058
70.	999	1	1200 mg/kg 48hr 41669
71. ↓	1000	0	2800 mg/kg 48hr 418107
72. 11/6/86 NY	999	1	2000 mg/kg 72hr 42140
73. 11/7/86 NY	1000	0	2800 mg/kg 72hr 42269
74	999	1	2800 mg/kg 30hr 41499
75	1000	0	2800 mg/kg 48hr 41909
76	1000	0	2000 mg/kg 30hr 41409
77	1000	0	1200 mg/kg 72hr 42099
78	999	1	2000 mg/kg 72hr 42169
79	999	1	MC 30hr 41179
80	981	19	C.P. 30hr 41069
81	998	2	2800 mg/kg 48hr 41869
82 ↓	996	4	1200 mg/kg 72hr 420107
83 11/7/86 NY	1000	0	1200 mg/kg 48hr 41709
84 11/10/86 NY	998	2	1200 mg/kg 30hr 41299
85 11/10/86 NY	999	1	2000 mg/kg 48hr 41738

Nancy Goughewat 11/10/86
Investigator Date

Ruth H. Eng 11-21-86
Study Director Date

SCORING SHEET

PHARMAKON RESEARCH INTERNATIONAL, INC.

TITLE: Cytogenetic Assay - Micronucleus Test

STUDY NO. PH309-SU-101-86Sponsor: Sutton Laboratories, Inc.

Values obtained from coded slides and subsequent decoding of test article

Sumell II

Code	Polychromatic Erythrocytes	Polychromatic Erythrocytes with Micronuclei	Decode
86 11/10/86 NB	999	1	MNC 30hr 41169
87 ↓	998	2	2000 mg/kg 72hr 42179
88 11/10/86 NB	1000	0	2800 mg/kg 72hr 42240
89 11/11/86 NB	9973	3	1200 mg/kg 48hr 41630
90	1000 ^{10EING 11/11/86}	0	2800 mg/kg 30hr 41509
91	999	1	2000 mg/kg 30hr 41350
92	970	30	CP 30hr 41099
93	1000	0	2800 mg/kg 48hr 41820
94	1000	0	MNC 72hr 41950
95	1000	0	1200 mg/kg 30hr 41250
96	1000	0	1200 mg/kg 30hr 41220
97	1000	0	2800 mg/kg 30hr 41420
98	998	2	MNC 48hr 41550
99 ↓	998	2	MNC 30hr 41130
100 11/11/86 NB	999	1	1200 mg/kg 30hr 41230
101 11/12/86 NB	999	1	2800 mg/kg 48hr 41879
102 11/12/86 NB	974	26 26	CP 30hr 41079

10EING
11/12/86Nancy Bongheinsk 11/12/86
Investigator DateLucretia M. Sorg 11-21-86
Study Director Date

SCORING SHEET

PHARMAKON RESEARCH INTERNATIONAL, INC.

TITLE: Cytogenetic Assay - Micronucleus Test STUDY NO. PH309-5U-001-86

Sponsor: Sutton Laboratories, Inc

Values obtained from coded slides and subsequent decoding of test article

Germell II

Code	Polychromatic Erythrocytes	Polychromatic Erythrocytes with Micronuclei	Decode
103 11/12/86 NY	1000	0	1200 mg/kg 30hr 41309
104	999	1	MC 48hr 411579
105	1000	0	2000 mg/kg 72hr 42130
106	1000	0	2000 mg/kg 30hr 41340
107 11/12/86 NY	998	2	2000 mg/kg 30hr 41370
108 11/13/86 NY	1000	0	1200 mg/kg 72hr 412030
109	999	1	MC 48hr 411540
110	999	1	2800 mg/kg 72hr 42210
111	999	1	2000 mg/kg 72hr 42199
112	1000	0	MC 72hr 41989
113	999	1	MC 72hr 41999
114	997	3	1200 mg/kg 30hr 411279
115 11/13/86 NY	999	1	2000 mg/kg 48hr 411769
116 11/14/86 NY	997	3	MC 30hr 41110
117	1000	0	MC 30hr 41120
118	998	2	1200 mg/kg 48hr 41620
119 11/14/86 NY	999	1	2800 mg/kg 72hr 42289

Nancy Stongliensk 11/14/86
Investigator Date

Ruth H. Sarg 11-21-86
Study Director Date

SCORING SHEET

PHARMAKON RESEARCH INTERNATIONAL, INC.

TITLE: Cytogenetic Assay - Micronucleus Test STUDY NO. PH309-SU-001-86

Sponsor: Sutton Laboratories, Inc.

Values obtained from coded slides and subsequent decoding of test article

Bernal II

Code	Polychromatic Erythrocytes	Polychromatic Erythrocytes with Micronuclei	Decode
120. 11/14/86 NS	999	1	MC 72hr 41928
121	1000	0	MC 48hr 41578 ³⁰ 15 ^{DE} 1420/86
122	1000	0	2800 mg/kg 72hr 42230
123	998	2	2800 mg/kg 30hr 41448
124	976	24	CP 30hr 41087
125	997	3	MC 48hr 41518
126	1000	0	MC 48hr 41597
127. 11/14/86 NS	998	2	2800 mg/kg 30hr 41438

Nancy Longueir 11/14/86
Investigator Date

Luit M. Sorg 11-24-86
Study Director Date

SCORING SHEET

PHARMAKON RESEARCH INTERNATIONAL, INC.

TITLE: Cytogenetic Assay - Micronucleus Test STUDY NO. PH309-JU-001-86

Sponsor: Sutton Laboratories, Inc.

Values obtained from coded slides and subsequent decoding of test article

Gernall II

of Mature Micronucleated Erythrocytes seen in the fields scanned to obtain 1000 PCEs.

Code	Mature Micronucleated Erythrocytes
1. 10/29/86 NY	1
2.	0
3	111
4.	0
5	0
6	0
7 10/29/86 NY	1
8 10/30/86 NY	1
9	0
10	1
11	11
12	0
13	0
14	0
15	0
16	0
17 10/30/86 NY	0

Nancy Longhewick 10/30/86
Investigator Date

Ruth H. Sorg 11-21-86
Study Director Date

SCORING SHEET

PHARMAKON RESEARCH INTERNATIONAL, INC.

TITLE: Cytogenetic Assay - Micronucleus Test

STUDY NO. PH309-JU-001-86Sponsor: Sutton Laboratories

Values obtained from coded slides and subsequent decoding of test article

of Mature Micronucleated Erythrocytes seen in the fields scanned to obtain 1000 PCEs.

<u>Code</u>	<u>Mature Micronucleated Erythrocytes</u>
18. 10/30/86 <u>789</u>	1
19. 10/30/86 <u>789</u>	0
20 10/31/86 <u>789</u>	0
21	0
22	0
23	0
24	0
25	0
26	1
27	0
28	11 2
29	0
30	1
31 10/31/86 <u>789</u>	0
32 11/3/86 <u>789</u>	0
33	0
34 11/3/86 <u>789</u>	0

Nancy England 11/3/86
Investigator Date

Ruth M. Sag 11-28-86
Study Director Date

SCORING SHEET

PHARMAKON RESEARCH INTERNATIONAL, INC.

TITLE: Cytogenetic Assay - Micronucleus Test STUDY NO. PH309-5U-001-86

Sponsor: Sutton Laboratories

Values obtained from coded slides and subsequent decoding of test article

Genell II

of Mature Micronucleated Erythrocytes seen in the fields scanned to obtain 1000 PCEs.

Code	Mature Micronucleated Erythrocytes
35 11/3/86 ND	0
36	0
37	0
38	0
39	0
40 1	1
41 11/3/86 ND	0
42 11/4/86 III	3
43	0
44	0
45 1	1
46 11/4/86 ND 1	1
47 11/5/86 ND	0
48	0
49	0
50	0
51 11/5/86 ND	0

Nancy Longhinska 11/5/86
Investigator Date

Eric M. Sag 11-21-86
Study Director Date

SCORING SHEET

PHARMAKON RESEARCH INTERNATIONAL, INC.

TITLE: Cytogenetic Assay - Micronucleus Test

STUDY NO. PH309-JU-001-86

Sponsor: Sutton Laboratories

Values obtained from coded slides and subsequent decoding of test article

of Mature Micronucleated Erythrocytes seen in the fields scanned to obtain 1000 PCEs. Serial II

Code	Mature Micronucleated Erythrocytes
52 11/5/86 N21	0
53	0
54 11/5/86 N20	0
55 11/6/86 N20	0
56	0
57	0
58 1	1
59	0
60 11	2
61 1	1
62	0
63	0
64	0
65	0
66	0
67	0
68 11/6/86 N21 11	2

Nancy Longhewick 11/6/86
Investigator Date

Lucretia M. Song 11/21/86
Study Director Date

SCORING SHEET

PHARMAKON RESEARCH INTERNATIONAL, INC.

TITLE: Cytogenetic Assay - Micronucleus Test

STUDY NO. PH309-SU-001-86Sponsor: Sutton Laboratories

Values obtained from coded slides and subsequent decoding of test article

of Mature Micronucleated Erythrocytes seen in the fields scanned to
obtain 1000 PCEs.

Code	Mature Micronucleated Erythrocytes
69 11/6/86 NY 11	2
70	0
71	6
72 11/6/86 NY	0
73 11/7/86	0
74	1
75	0
76	0
77	0
78	0
79	1
80 III	3
81	0
82	0
83 11/7/86 NY	0
84 11/10/86 NY	0
85 11/10/86 NY	0

Nancy Bonglewske 11/10/86
Investigator Date

Luigi M. Sarg 11/21/86
Study Director Date

SCORING SHEET

PHARMAKON RESEARCH INTERNATIONAL, INC.

TITLE: Cytogenetic Assay - Micronucleus Test

STUDY NO. PH309-SU-001-86

Sponsor:

Sutton Laboratories

Values obtained from coded slides and subsequent decoding of test article

of Mature Micronucleated Erythrocytes seen in the fields scanned to obtain 1000 PCEs.

Code

Mature Micronucleated Erythrocytes

86	11/10/86 NY	11	2
87	↓		0
88	11/10/86 NY		0
89	11/11/86 NY	11	2
890			0
100 NG			0
91			0
92		1	1
93			0
94			0
95			0
96			0
97		1	1
98			0
99	↓		0
100	11/11/86 NY		0
101	11/12/86 NY		0
102	11/12/86 NY		0

Nancy Bongheisel 11/12/86
Investigator Date

Paul M. Fry 11-21-86
Study Director Date

SCORING SHEET

PHARMAKON RESEARCH INTERNATIONAL, INC.

TITLE: Cytogenetic Assay - Micronucleus Test

STUDY NO. PH309-JU-001-86Sponsor: Sutton Laboratories

Values obtained from coded slides and subsequent decoding of test article

of Mature Micronucleated Erythrocytes seen in the fields scanned to
obtain 1000 PCEs.

<u>Code</u>	<u>Mature Micronucleated Erythrocytes</u>
103 11/12/86 789	0
104	0
105	1
106	0
107 11/12/86 789 11	2
108 11/13/86 789	0
109	0
110	0
111	0
112	0
113	0
114	0
115 11/13/86 789	0
116 11/14/86 789	0
117	0
118	1
119 11/14/86 789	0

Nancy Bongleinsk 11/14/86
Investigator Date

Lucretia M. Eng 11/24/86
Study Director Date

SCORING SHEET

PHARMAKON RESEARCH INTERNATIONAL, INC.

TITLE: Cytogenetic Assay - Micronucleus Test STUDY NO. PH309-SU-001-86

Sponsor:

Values obtained from coded slides and subsequent decoding of test article

of Mature Micronucleated Erythrocytes seen in the fields scanned to obtain 1000 PCEs.

Code

Mature Micronucleated Erythrocytes

120	11/14/86	78	1
121.			0
122.			0
123.			0
124.		11	2
125.		1	1
126.		1	1
127.	11/14/86	78	1

Nancy Gungliewski 11/14/89
Investigator Date

Investigator J. [Signature] Date 11/24/80
 Study Director Lester M. [Signature] Date 11/24/80

SCORING SHEET

PHARMAKON RESEARCH INTERNATIONAL, INC.

TITLE: Cytogenetic Assay - Micronucleus Test

STUDY NO. PH309-SU-001-86Sponsor: Sutton Laboratories

Values obtained from coded slides and subsequent decoding of test article

Germell II

Code		Polychromatic Erythrocytes	Normochromatic Erythrocytes		Decode
1	<u>RM 10/31/86</u>	662	338	MC	72Hrs. 419307
2		601	399	2000mg/kg	72Hrs 421507
3		538	462	CP	30Hrs 411079
4		682	318	1200mg/kg	48Hrs 416507
5		598	402	2000mg/kg	48Hrs 418079
6		586	414	1200mg/kg	72Hrs 420779
7		595	405	2000mg/kg	72Hrs 421879
8		479	521	2800mg/kg	30Hrs 414107
9		722	278	1200mg/kg	30Hrs 412679
10		585	415	2000mg/kg	48Hrs 417407
11		489	511	MC	30Hrs 411407
12		589	411	MC	48Hrs 415207
13	<u>✓</u>	734	266	2800mg/kg	72Hrs 422779
14	<u>RM 10/31/86</u>	496	504	2000mg/kg	30Hrs 413207
15	<u>RM 11/5/86</u>	627	373	2000mg/kg	30Hrs 413307
16	<u>✓</u>	560	440	MC	48Hrs 415679
17	<u>RM 11/5/86</u>	665	335	1200mg/kg	48Hrs 416979

Nick Madison 11/5/86
Investigator Date

Paul M. Song 11/20/86
Study Director Date

SCORING SHEET

PHARMAKON RESEARCH INTERNATIONAL, INC.

TITLE: Cytogenetic Assay - Micronucleus Test

STUDY NO. 44309-SU-001-86Sponsor: Sutton Laboratories

Values obtained from coded slides and subsequent decoding of test article

Kennell II

Code	Polychromatic Erythrocytes	Normochromatic Erythrocytes	Decode
18 Km 11/5/86	465	535	CP 30Hrs 410207
19	560	440	2800mg/kg 30Hrs 41477
20 Km 11/5/86	656	344	2800mg/kg 48Hrs 418307
21 Km 11/6/86	610	390	MC 48Hrs 41607
22	623	377	1200mg/kg 48Hrs 41687
23	554	446	1200mg/kg 72Hrs 420207
24	402	598	CP 30Hrs 410407
25	650	350	2000mg/kg 30Hrs 41387
26	594	406	1200mg/kg 72Hrs 42067
27	676	324	2000mg/kg 48Hrs 41777
28	453	547	2000mg/kg 30Hrs 413107
29	677	323	2800mg/kg 48Hrs 41897
30	540	460	2000mg/kg 48Hrs 417507
31	515	487	1200mg/kg 30Hrs 412107
32	502	498	1200mg/kg 30Hrs 412407
33	540	460	MC 30Hrs 41187
34 Km 11/6/86	476	524	2000mg/kg 48Hrs 417107

Investigator

Date

Study Director

Date

SCORING SHEET

PHARMAKON RESEARCH INTERNATIONAL, INC.

TITLE: Cytogenetic Assay - Micronucleus Test

STUDY NO. PH309-SU-001-86Sponsor: Sutton Laboratories

Values obtained from coded slides and subsequent decoding of test article

Germell II

Code	Polychromatic Erythrocytes	Normochromatic Erythrocytes	Decode
35 NM 11/6/86	621	379	MC 48Hrs 415307
36	653	347	1200mg/kg 72Hrs 42107
37	670	330	2800mg/kg 30Hrs 41487
38	739	261	1200mg/kg 30Hrs 41287
39	582	418	2800mg/kg 48Hrs 41887
40	682	318	2000mg/kg 30Hrs 41367
41	517	483	MC 72Hrs 419407
42 NM 11/6/86	496	504	CP 30Hrs 411107
43 NM 11/7/86	709	291	2800mg/kg 30Hrs 41467
44	575	425	2000mg/kg 72Hrs 42127
45	631	369	MC 30Hrs 41207
46	677	323	1200mg/kg 48Hrs 416407
47	601	399	2800mg/kg 48Hrs 418507
48	597	403	MC 30Hrs 41197
49	639	361	2000mg/kg 72Hrs 421107
50	588	412	MC 72Hrs 42007
51 NM 11/7/86	701	299	2800mg/kg 72Hrs 42307

Investigator

Date

Study Director

Date

SCORING SHEET

PHARMAKON RESEARCH INTERNATIONAL, INC.

TITLE: Cytogenetic Assay - Micronucleus Test

STUDY NO. PH309-SU-001-86Sponsor: Sutton Laboratories

Values obtained from coded slides and subsequent decoding of test article

Germall II

Code	Polychromatic Erythrocytes	Normochromatic Erythrocytes	Decode
52 <u>RM 11/7/86</u>	591	409	2000mg/kg 48Hrs 4178 f
53	513	487	1200mg/kg 72Hrs 420407
54	577	423	2000mg/kg 48Hrs 4179 f
55	634	366	MC 72Hrs 4196 f
56	635	365	MC 72Hrs 4197 f
57	642	358	1200mg/kg 48Hrs 4167 f
58 <u>RM 11/7/86</u>	511	489	1200mg/kg 72Hrs 4208 f
59 <u>RM 11/7/86</u>	584	416	2500mg/kg 30Hrs 414507
60 <u>RM 11/10/86</u>	388	612	CP 30Hrs 410307
61	697	303	2500mg/kg 72Hrs 4229 f
62	586	414	2000mg/kg 30Hrs 4139 f
63	564	436	MC 72Hrs 419107
64	596	404	2000mg/kg 72Hrs 4220 f
65	558	442	1200mg/kg 48Hrs 416107
66	530	470	2000mg/kg 48Hrs 417207
67 <u>RM 11/10/86</u>	558	442	1200mg/kg 72Hrs 420507
68 <u>RM 11/10/86</u>	609	391	MC 48Hrs 4158 f

Mira Madison 11/10/86
Investigator Date

Ruth M. Sorg 11/20/86
Study Director Date

SCORING SHEET

PHARMAKON RESEARCH INTERNATIONAL, INC.

TITLE: Cytogenetic Assay - Micronucleus Test

STUDY NO. 44309-50-001-86

Sponsor:

Sutton Laboratories

Values obtained from coded slides and subsequent decoding of test article

Barwell II

Code	Polychromatic Erythrocytes	Normochromatic Erythrocytes	Decode
69 Km 11/10/86	376	624	CP 30Hrs 41050
70	576	424	1200mg/kg 48Hrs 41669
71	611	389	2800mg/kg 48Hrs 41810
72	538	462	2000mg/kg 72Hrs 42140
73	701	299	2800mg/kg 72Hrs 42269
74	619	381	2800mg/kg 30Hrs 41499
75	610	³⁹⁰ 390	2800mg/kg 48Hrs 41909
76	706	¹⁰⁰ 100 294	2000mg/kg 30Hrs 41409
77 Km 11/10/86	556	444	1200mg/kg 72Hrs 42099
78 Km 11/11/86	497	503	2000mg/kg 72Hrs 42169
79	653	347	MC 30Hrs 41179
80	542	458	CP 30Hrs 41069
81	620	380	2800mg/kg 48Hrs 41869
82	583	417	1200mg/kg 72Hrs 42010
83	662	338	1200mg/kg 48Hrs 41709
84	539	461	1200mg/kg 30Hrs 41299
85 Km 11/11/86	586	414	2000mg/kg 48Hrs 41730

Nico Marion 11/11/86
Investigator Date

Ruth M. Song 11/20/80
Study Director Date

SCORING SHEET

PHARMAKON RESEARCH INTERNATIONAL, INC.

TITLE: Cytogenetic Assay - Micronucleus Test

STUDY NO. 44309-SU-001-86Sponsor: Sutton Laboratories

Values obtained from coded slides and subsequent decoding of test article

Kernell

Code	Polychromatic Erythrocytes	Normochromatic Erythrocytes	Decode
86 <u>km 11/11/86</u>	575	425	MC 30Hrs 4116F
87 <u>km 11/11/86</u>	611	389	2000mg/kg 72Hrs 4217F
88 <u>km 11/12/86</u>	552	448	2800mg/kg 72Hrs 422407
89	600	400	1200mg/kg 78Hrs 416307
90	572	428	2800mg/kg 30Hrs 4150F
91	617	383	2000mg/kg 30Hrs 413507
92	529	471	CP 30Hrs 4109F
93	534	466	2800mg/kg 48Hrs 418207
94	487	513	MC 72Hrs 419507
95	351	649	1200mg/kg 30Hrs 412507
96	557	443	1200mg/kg 30Hrs 412207
97	502	498	2800mg/kg 30Hrs 414207
98	678	322	MC 48Hrs 415507
99	390	610	MC 30Hrs 411307
100	562	438	1200mg/kg 30Hrs 412307
101 <u>✓</u>	636	364	2800mg/kg 48Hrs 4187F
102 <u>km 11/12/86</u>	532	468	CP 30Hrs 4107F

Maria Maden 11/12/86
Investigator Date

Ruth H. Eng 11/20/86
Study Director Date

SCORING SHEET

PHARMAKON RESEARCH INTERNATIONAL, INC.

TITLE: Cytogenetic Assay - Micronucleus Test STUDY NO. 44309-SU-001-86

Sponsor: Sutton Laboratories

Values obtained from coded slides and subsequent decoding of test article

Gemmel II

Code	Polychromatic Erythrocytes	Normochromatic Erythrocytes	Decode
103 <u>Nm 11/12/86</u>	644	356	1200mg/kg 30Hrs 4130♀
104 ↓	544	456	MC 48Hrs 4157♀
105 <u>Nm 11/12/86</u>	456	544	2000mg/kg 72Hrs 4213♂
106 <u>Nm 11/18/86</u>	608	392	2000mg/kg 30Hrs 4134♂
107	564	436	2000mg/kg 30Hrs 4137♀
108	564	436	1200mg/kg 72Hrs 4203♂
109	646	360	MC 48Hrs 4154♂
110	553	447	2800mg/kg 72Hrs 4221♂
111	655	345	2000mg/kg 72Hrs 4219♀
112	410	590	MC 72Hrs 4198♀
113	541	459	MC 72Hrs 4199♀
114	696	304	1200mg/kg 30Hrs 4127♀
115	608	392	2000mg/kg 48Hrs 4176♀
116	300	700	MC 30Hrs 4111♂
117	595	405	MC 30Hrs 4112♂
118 ↓	652	348	1200mg/kg 48Hrs 4162♂
119 <u>Nm 11/18/86</u>	699	301	2800mg/kg 72Hrs 4228♀

Mark Madison 11/18/86
Investigator Date

Lucretia M. Sarg 11/20/86
Study Director Date

SCORING SHEET

PHARMAKON RESEARCH INTERNATIONAL, INC.

TITLE: Cytogenetic Assay - Micronucleus Test

STUDY NO. 44309-50-001-86

Sponsor:

Sutton Laboratories

Values obtained from coded slides and subsequent decoding of test article

Germall II

Code	Polychromatic Erythrocytes	Normochromatic Erythrocytes	Decode
120 <i>NM 11/19/86</i>	477	523	MC 72 Hrs 419207
121	1046	354	MC ³⁰ 48 Hrs 411507
122	477	523	2800 mg/kg 72 Hrs 422307
123	579	421	2800 mg/kg 30 Hrs 414407
124	467	533	CP 30 Hrs 41089
125	552	448	MC 48 Hrs 415107
126 <i>↓</i>	692	308	MC 48 Hrs 41599
127 <i>NM 11/19/86</i>	550	450	2800 mg/kg 30 Hrs 414307

Nick Madson 11/19/86
Investigator Date
Keith M. Grogg 11/20/86
Study Director Date

PHARMAKON RESEARCH INTERNATIONAL, INC.

CODE SHEET

Sponsor: Sutton Laboratories
 PH 309-5U-001-86
 Test Article: Merrell II
 Dose Level: 1200, 2000 and 2800 mg/kg

Coded by: Donna Heath
 Date 10/21/86
 Decoded by: nm
 Date 11-19-86

Code	Dose	Harvest Time	Animal #	Code	Dose	Harvest Time	Animal #
1	MC	72 HR.	4193 ♂	27	2000 mg/kg	48 HR	4177 ♀
2	2000 mg/kg	72 HR.	4215 ♂	28	2000 mg/kg	30 HR	4131 ♂
3	CP	30 HR	4110 ♀	29	2800 mg/kg	48 HR	4189 ♀
4	1200 mg/kg	48 HR	4165 ♂	30	2000 mg/kg	48 HR	4175 ♂
5	2000 mg/kg	48 HR	4180 ♀	31	1200 mg/kg	30 HR	4121 ♂
6	1200 mg/kg	72 HR	4207 ♀	32	1200 mg/kg	30 HR	4124 ♂
7	2000 mg/kg	72 HR	4218 ♀	33	MC	30 HR	4118 ♀
8	2800 mg/kg	30 HR	4141 ♂	34	2000 mg/kg	48 HR	4171 ♂
9	1200 mg/kg	30 HR	4126 ♀	35	MC	48 HR	4153 ♂
10	2000 mg/kg	48 HR	4174 ♂	36	1200 mg/kg	72 HR	4210 ♀
11	MC	30 HR	4114 ♂	37	2800 mg/kg	30 HR	4148 ♀
12	MC	48 HR	4152 ♂	38	1200 mg/kg	30 HR	4128 ♀
13	2800 mg/kg	72 HR	4227 ♀	39	2800 mg/kg	48 HR	4188 ♀
14	2000 mg/kg	30 HR	4132 ♂	40	2000 mg/kg	30 HR	4136 ♀
15	2000 mg/kg	30 HR	4133 ♂	41	MC	72 HR	4194 ♂
16	MC	48 HR	4156 ♀	42	CP	30 HR	4101 ♂
17	1200 mg/kg	48 HR	4169 ♀	43	2800 mg/kg	30 HR	4146 ♀
18	CP	30 HR	4102 ♂	44	2000 mg/kg	72 HR	4212 ♂
19	2800 mg/kg	30 HR	4147 ♀	45	MC	30 HR	4120 ♀
20	2800 mg/kg	48 HR	4183 ♂	46	1200 mg/kg	48 HR	4164 ♂
21	MC	48 HR	4160 ♀	47	2800 mg/kg	48 HR	4185 ♂
22	1200 mg/kg	48 HR	4168 ♀	48	MC	30 HR	4119 ♀
23	1200 mg/kg	72 HR	4202 ♂	49	2000 mg/kg	72 HR	4211 ♂
24	CP	30 HR	4104 ♂	50	MC	72 HR	4200 ♀
25	2000 mg/kg	30 HR	4138 ♀	51	2800 mg/kg	72 HR	4230 ♀
26	1200 mg/kg	72 HR	4206 ♀	52	2000 mg/kg	48 HR	4178 ♀

Study Director Lutz M. Sorg 11-21-86
 page 129

PHARMACON RESEARCH INTERNATIONAL, INC.

CODE SHEET

Sponsor: Sutton Laboratories
 PR 309-5U-001-86
 Test Article: Germell II
 Dose Level: 1200, 2000 and 2800 mg/kg

Coded by: Donna H. Hutto
 Date: 10/29/86
 Decoded by: SW
 Date: 11-19-86

Code	Dose	Harvest Time	Animal #	Code	Dose	Harvest Time	Animal #
53	1200 mg/kg	72 HR	4204 ♂	79	MC	30 HR	4119 ♀
54	2000 mg/kg	48 HR	4179 ♀	80	CP	30 HR	4106 ♀
55	MC	72 HR	4196 ♀	81	2800 mg/kg	48 HR	4186 ♀
56	MC	72 HR	4197 ♀	82	1200 mg/kg	72 HR	4201 ♂
57	1200 mg/kg	48 HR	4167 ♀	83	1200 mg/kg	48 HR	4170 ♀
58	1200 mg/kg	72 HR	4208 ♀	84	1200 mg/kg	30 HR	4129 ♀
59	2800 mg/kg	30 HR	4145 ♂	85	2000 mg/kg	48 HR	4173 ♂
60	CP	30 HR	4103 ♂	86	MC	30 HR	4116 ♀
61	2800 mg/kg	72 HR	4229 ♀	87	2000 mg/kg	72 HR	4217 ♀
62	2000 mg/kg	30 HR	4139 ♀	88	2800 mg/kg	72 HR	4224 ♂
63	MC	72 HR	4191 ♂	89	1200 mg/kg	48 HR	4163 ♂
64	2000 mg/kg	72 HR	4220 ♀	90	2800 mg/kg	30 HR	4150 ♀
65	1200 mg/kg	48 HR	4161 ♂	91	2000 mg/kg	30 HR	4135 ♂
66	2000 mg/kg	48 HR	4172 ♂	92	CP	30 HR	4109 ♀
67	1200 mg/kg	72 HR	4205 ♂	93	2800 mg/kg	48 HR	4182 ♂
68	MC	48 HR	4158 ♀	94	MC	72 HR	4195 ♂
69	CP	30 HR	4105 ♂	95	1200 mg/kg	30 HR	4125 ♂
70	1200 mg/kg	48 HR	4166 ♀	96	1200 mg/kg	30 HR	4122 ♂
71	2800 mg/kg	48 HR	4181 ♂	97	2800 mg/kg	30 HR	4142 ♂
72	2000 mg/kg	72 HR	4214 ♂	98	MC	48 HR	4155 ♂
73	2800 mg/kg	72 HR	4226 ♀	99	MC	30 HR	4113 ♂
74	2800 mg/kg	30 HR	4149 ♀	100	1200 mg/kg	30 HR	4123 ♂
75	2800 mg/kg	48 HR	4190 ♀	101	2800 mg/kg	48 HR	4187 ♀
76	2000 mg/kg	30 HR	4140 ♀	102	CP	30 HR	4107 ♀
77	1200 mg/kg	72 HR	4209 ♀	103	1200 mg/kg	30 HR	4130 ♀
78	2000 mg/kg	72 HR	4216 ♀	104	MC	48 HR	4157 ♀

Study Director Ruth M. Sorey 11-24-86page 130

PHARMAKON RESEARCH INTERNATIONAL, INC.

CODE SHEET

Sponsor:

PH 309-50-001-86

Test Article: *Germall II*

Dose Level: 1200, 2000 and 2800 mg/kg

Coded by: 4

Date

Decoded by:

Date _____

Code	Dose	Harvest Time	Animal #
105	2000 mg/Kg	72 HR	4213 ♂
106	2000 mg/Kg	30 HR	4134 ♂
107	2000 mg/Kg	30 HR	4137 ♀
108	1200 mg/Kg	72 HR	4203 ♂
109	MC	48 HR	4154 ♂
110	2800 mg/Kg	72 HR	4221 ♂
111	2000 mg/Kg	72 HR	4219 ♀
112	MC	72 HR	4198 ♀
113	MC	72 HR	4199 ♀
114	1200 mg/Kg	30 HR	4127 ♀
115	2000 mg/Kg	48 HR	4176 ♀
116	MC	30 HR	4110 ♂
117	MC	30 HR	4112 ♂
118	1200 mg/Kg	48 HR	4162 ♂
119	2800 mg/Kg	72 HR	4228 ♀
120	MC	72 HR	4192 ♂
121	MC	30 ^{25 PM} 48 ^{11:20-8:15} HR	4157 ♂
122	2800 mg/Kg	72 HR	4223 ♂
123	2800 mg/Kg	30 HR	4144 ♂
124	CP	30 HR	4108 ♀
125	MC	48 HR	4151 ♂
126	MC	48 HR	4159 ♀
127	2800 mg/Kg	30 HR	4143 ♂

Study Director

page 131

SALMONELLA/MAMMALIAN-MICROSOME PLATE
INCORPORATION MUTAGENICITY ASSAY
(AMES TEST)

TEST ARTICLE AT0214

(Germall II -- Diazolidinyl Urea)





Microbiological Associates
A Unit of Whittaker Corporation
5221 River Road
Bethesda, Maryland 20816
(301) 654-3400
Telex No. 90-8793

Whittaker

SALMONELLA/MAMMALIAN-MICROSOME PLATE
INCORPORATION MUTAGENICITY ASSAY
(AMES TEST)

Sponsor:

Testing Facility: 1530 East Jefferson Street
Rockville, Maryland 20852

Study No.: T2039.501

Test Article I.D.: AT0214

Test Article Lot No.: None Provided

Test Article Description: White Powder

Storage Conditions: Room Temperature with Desiccation,
Protected from Light

Date Received: 6/7/83

Date Study Started: 6/30/83

Date Study Completed: 7/28/83

Report Date: 7/29/83

Study Coordinator:

Study Director: Steve R. Haworth, Ph.D.
Microbiological Associates

Steve R. Haworth 7/28/83
Steve R. Haworth, Ph.D. Date
Study Director

Timothy E. Lawlor 7/29/83
Timothy E. Lawlor Date
Alternate Study Director

Jeanene K. Burke 7/28/83
Jeanene K. Burke Date
Group Leader

Sheila M. Olewine 7/28/83
Sheila M. Olewine Date
Biologist

Robin J. Plunkett 7/28/83
Robin J. Plunkett Date
Biologist

Linda M. Coyle 7/28/83
Linda M. Coyle Date
Biologist

QUALITY ASSURANCE STATEMENT

Study Title: Salmonella/Mammalian-Microsome Plate Incorporation
Mutagenicity Assay (Ames Test)

Study Number: T2039.501

Study Director: S. Haworth, Ph.D.

Initiation Date: June 30, 1983

Review Completed Date: July 29, 1983

This study has been divided into a series of phases. Using a random sampling approach, Quality Assurance monitors each of these phases over a series of studies. Procedures, documentation, equipment, etc. are examined in order to assure that the study is performed in accordance with the Good Laboratory Practices regulations and to assure that the study is conducted according to the protocol.

The following are the inspection dates, phases inspected, and report dates of QA inspections of this study.

<u>DATE OF</u> <u>INSPECTION</u>	<u>PHASE INSPECTED</u>	<u>REPORT SUBMITTED TO</u> <u>STUDY DIRECTOR</u>	<u>MANAGEMENT</u>
6/15/83	Protocol review	6/15/83	6/15/83
6/30/83	Initial toxicity: Strain characterization	6/30/83	7/1/83
	Treatment & plating of the cultures		
7/28/83	Final report	7/28/83	7/29/83

This report describes the methods and procedures used in the study and the reported results accurately reflect the raw data of the study.

 7/29/83

Nona S. Karten Date
Associate Director RA/QA

Introduction

test article AT0214 (MA #T2039) was received on June 7, 1983, for testing in the Salmonella/mammalian-microsome mutagenicity assay using five tester strains, TA98, TA100, TA1535, TA1537 and TA1538, both with and without metabolic activation by Aroclor induced rat liver microsomes.

Conclusions

The results of the Salmonella/mammalian-microsome mutagenicity assay indicate that under the conditions of this study, test article AT0214 (MA #T2039) did not cause a positive response on any of the tester strains with or without metabolic activation by Aroclor induced rat liver microsomes.

It should be noted that in the presence of rat liver microsomes, there was a two to three-fold non-dose-responsive increase in TA1537 revertants per plate. There were also less than two-fold increases in TA98 and TA97 revertants per plate observed in the same experiments. However, none of the increases met the criteria for a positive response as described in the protocol used for this study.

MATERIALS AND METHODS¹

Media Preparation

Top Agar for Selection of Histidine Revertants: Minimal top agar was prepared with 8 g/liter Difco Bacto Agar and 5 g/liter NaCl. After autoclaving, the molten agar was distributed in 100 ml aliquots into sterile bottles and stored at room temperature. Immediately before its use in the mutagenicity assay, the top agar was melted and supplemented with 10 ml/100 ml agar of a sterile solution which contained 0.5 mM L-histidine and 0.5 mM D-biotin. Twenty-five ml of sterile deionized water was added per 100 ml top agar when it was used in assays without metabolic activation. This ensured that final top agar and amino acid supplement concentrations were the same on plates with or without metabolic activation.

Top Agar for Viable Count Determination: Minimal top agar as described above was supplemented with 35 ml/100 ml agar of a sterile solution which contained 1.4 mM L-histidine and 0.12 mM D-biotin.

Minimal Bottom Agar: Bottom agar was Vogel-Bonner minimal medium E.²

Nutrient Broth: Nutrient broth used for growing overnight cultures of the tester strains contained 25 g per liter of Nutrient Broth No. 2 (Oxoid).

Nutrient Bottom Agar: Nutrient bottom agar was Vogel-Bonner³ minimal medium E supplemented with 25 g per liter of Nutrient Broth No. 2 (Oxoid).

¹The experimental materials, methods and procedures are based on those described by Ames, B. N., et al. Methods for detecting carcinogens and mutagens with the Salmonella/mammalian-microsome mutagenicity test. Mutation Research 31: 347-364, 1975.

²Vogel, H. J. and D. M. Bonner, Acetylornithinase of E. coli: partial purification and some properties, J. Biol. Chem., 218:97-106 (1956).

³Ibid.

Tester Strain Diluent: Diluent for tester strain titering contained Vogel-Bonner salt solution⁴ supplemented with 10% Nutrient Broth.

Test Article Diluent: The solvent used for diluting the test article was deionized, distilled H₂O.

Tester Strains

The tester strains used were the histidine auxotrophs TA98, TA100, TA1535, TA1537 and TA1538 as suggested by Ames.⁵

GENOTYPE OF THE TA STRAINS USED FOR MUTAGEN TESTING

Histidine mutation			Additional mutations		
<u>hisG46</u>	<u>hisC3076</u>	<u>hisD3052</u>	LPS	Repair	R factor
TA1535	TA1537	TA1538	<u>rfa</u>	<u>uvrB</u>	-
TA100		TA98	<u>rfa</u>	<u>uvrB</u>	+R

The tester strains possess characteristics which greatly enhance their sensitivity to mutagenic materials.

Each strain possesses the rfa wall mutation which has resulted in the loss of much of the lipopolysaccharide layer that coats the surface of the bacteria. This allows the entry into the bacterial cells of large ring compounds that would otherwise be excluded by a normal intact cell wall. Secondly, a stable mutation resulting in the loss of an excision repair system (uvrB) further enhances each tester strain's sensitivity to some mutagens. Finally, strains TA98 and TA100 contain the pKM101 plasmid which further increases the sensitivity of these two strains to some mutagens.

⁴Vogel, H. J., et al., op cit.

⁵Ames, E. N., et al., op cit.

TA98, TA1537 and TA1538 are reverted from histidine dependence (auxotrophy) to histidine independence (prototrophy) by frame shift mutagens. TA100 and TA1535 are reverted by mutagens that cause base substitutions.

Tester strains in use at Microbiological Associates were received directly from Dr. Bruce Ames, Department of Biochemistry, University of California, Berkeley.

Tester strain stocks were stored in liquid nitrogen, and fresh cultures were inoculated directly from these frozen stocks. Broth cultures were grown overnight at 37°C with shaking. At the time of its use in the mutagenicity assay, each culture was checked, as described by Ames, for the presence of the rfa wall mutation and strains TA98 and TA100 were checked for the presence of the pkM101 plasmid.⁶

Toxicity Determination and Selection of Maximum Test Article Dose Level

The test article was checked for toxicity to the tester strains up to a concentration of 10 mg/plate. An aliquot from ten dilutions of the test article was plated with an overnight TA100 culture on selective minimal agar, both in the presence and absence of metabolic activation. Toxicity is detectable by a decrease in the number of revertant colonies occurring per plate and/or by a thinning or disappearance of the background bacterial lawn. The highest concentration of test article used in the subsequent mutagenicity assay was that which gave a detectable reduction in the number of revertants per plate and/or produced a thinning or disappearance of the background bacterial lawn.

When necessary, separate dose levels are plated for the portion of the assay with metabolic activation and the without metabolic activation portion of the assay.

The results of the preliminary toxicity determination are presented in the Results section of the final report.

⁶Ames, B. N., et al., op cit.

Plating Procedures for the Mutagenicity Assay

Test System Identification: Each plate was labeled using indelible ink with a code system which identifies the test article, test phase, dose level and activation as described in detail in Microbiological Associates' Microbial Mutagenesis Standard Operating Procedures.

Test Article: The test article was solubilized and serially diluted immediately before its use in the mutagenicity assay. Five doses of the test article were plated with all five tester strains (TA98, TA100, TA1535, TA1537, TA1538) with metabolic activation and without metabolic activation. All positive controls, solvent controls and test article doses were plated in triplicate. Without metabolic activation, 50 µl of tester strain and 50 µl of solvent or test article were added to 2.5 ml of molten selective top agar at 45°C. With metabolic activation, 50 µl of tester strain, 50 µl of solvent or test article, and 0.5 ml of S-9 mix were added to 2.0 ml of molten selective top agar at 45°C. After vortexing, the mixture was overlayed onto the surface of 25 ml of minimal bottom agar. After the overlay had solidified, the plates were inverted and incubated for 48 hours at 37°C.

Positive Controls: All combinations of positive controls and tester strains plated along with the assay are listed below:

<u>Strain</u>	<u>Activation</u>	<u>Positive Controls</u>	<u>Conc. per Plate</u>
TA98	+	2-Aminoanthracene	4.0 µg
TA98	-	2-Nitrofluorene	5.0 µg
TA100	+	2-Aminoanthracene	4.0 µg
TA100	-	Sodium Azide	5.0 µg
TA1535	+	2-Aminoanthracene	4.0 µg
TA1535	-	Sodium Azide	5.0 µg
TA1537	+	2-Aminoanthracene	4.0 µg
TA1537	-	9-Aminoacridine	75 µg
TA1538	+	2-Aminoanthracene	4.0 µg
TA1538	-	2-Nitrofluorene	5.0 µg

Source and Grade

9-Aminoacridine (CAS #90-45-9), Sigma Chemical Co.,
grade II, ~90% pure

2-Aminoanthracene (CAS #613-13-8), Sigma Chemical Co.,
practical grade

2-Nitrofluorene (CAS #607-57-8), Aldrich Chemical Co.,
98% pure

Sodium Azide (CAS #26628-22-8), Sigma Chemical Co.,
practical grade

Tester Strain Titters: Tester strain titers were determined by viable count assays on nutrient agar plates. The averaged number of cells plated per plate are reported on the individual strain data forms.

Test Article Sterility Determination: The most concentrated test article dilution for the mutagenicity assay was checked for sterility by plating a 50 μ l aliquot of the dilution on selective agar.

Liver Microsomal Enzymes

Preparation of S-9 Homogenate: Liver microsomal enzymes were prepared from male Sprague-Dawley rats that had been injected with Aroclor 1254 at 500 mg/kg. The Aroclor was diluted in corn oil to a concentration of 200 mg/ml. Five days after their i.p. injection with the Aroclor, the rats were sacrificed by decapitation, and their livers were excised. The rats were fasted for 12 hours immediately preceding sacrifice.

The preparation of the microsomal enzyme fraction was carried out with sterile glassware and solutions at 0-4°C. The liver from each rat was excised and placed in approximately 20 ml of 0.15M KCl contained in a pre-weighed beaker. After weighing the liver, it was transferred to another beaker containing 3 volumes of 0.15M KCl (3 ml/g of wet liver) where it was minced with sterile scissors. The minced liver was homogenized in a Potter-Elvehjen apparatus with a teflon pestle. The homogenate was centrifuged

at 9000 x g for 10 minutes in the SS-34 rotor of a Sorvall SS-3 centrifuge. The supernatant (referred to by Ames as the S-9 fraction) was decanted, and small aliquots were distributed into freezing ampules which were stored at $\leq -70^{\circ}\text{C}$.

Preparation of S-9 Mix: The S-9 mix was prepared immediately before its use in the mutagenicity assay.

The microsomal enzyme reaction mixture (S-9 mix) which was added to the soft agar overlay contained the following components per ml:

S-9	0.10 ml
0.2M MgCl_2 /.825M KCl	0.04 ml
0.04M NADP	0.10 ml
0.04M Glucose-6-phosphate	0.10 ml
1.00M NaH_2PO_4 , pH 7.4	0.10 ml
H_2O	0.56 ml
	<u>1.00 ml</u>

Colony Counting

Revertant colonies for a given tester strain within a given test article dilution series were counted either entirely by automated colony counter or entirely by hand. Plates with sufficient test article precipitate to interfere with automated colony counting were counted manually.

The condition of the background bacterial lawn was evaluated for evidence of test article toxicity, by using a dissecting microscope. This toxicity was scored relative to the solvent control plate and recorded along with the revertant count for that plate on the individual strain data forms using the code system on page 14.

Analysis of Data

All platings were done in triplicate. For each triplicate plating, an average and standard deviation were calculated. The calculations were done on a Hewlett-Packard HP-25 programmable calculator which employs the following equations:

Average (\bar{x})

$$\bar{x} = \frac{1}{n} \sum_{i=1}^n x_i$$

Standard Deviation (S_x)

$$S_x = \sqrt{\frac{\sum x^2 - \frac{(\sum x)^2}{n}}{n-1}}$$

Evaluation of Mutagenicity Assay Data

For a test article to be considered positive, it must cause at least a doubling in the mean revertants per plate of at least one tester strain. This increase in the mean number of revertants per plate must be accompanied by a dose response to increasing concentrations of the test article. In those cases where the observed dose-responsive increase in TA1537 or TA1538 revertants per plate is less than three-fold, the response must be reproducible.

Archives

All experimental records of the study are maintained in the Microbiological Associates' archives located at 1530 East Jefferson Street, Rockville, Maryland, 20852.

Stability of the Test Article

The stability of the test article under the actual experimental conditions used in this study was not determined by Microbiological Associates.

RESULTS

The Salmonella/Mammalian-Microsome Mutagenicity Assay is divided into two phases. The first phase, the preliminary toxicity determination, is used to establish the dose range over which the test article will be assayed. The second phase is the mutagenicity assay of the test article.

Results of the preliminary toxicity determination of test article AT0214 (MA #T2039) are presented in Tables 1 and 2.

PRELIMINARY TOXICITY DETERMINATION
OF TEST ARTICLE

T2039-A1
Experiment I.D.

T2039.501
Study Number

Table 1

AT0214
Test Article Identification

With S-9 Activation

Test Article Concentration µg/Plate	TA100 Revertants/ Plate	TA100 Background Bacterial Lawn*
H ₂ O 50 µl	84	1
0.0001	70	1
0.001	90	1
0.010	94	1
0.033	84	1
0.10	85	1
0.33	80	1
1.0	81	1
10	75	1
100	80	1
1,000	41	4

*Refer to background bacterial
lawn evaluation code key

Date Plated 6/30/83

Dilutions of the test article are plated with TA100 on selective agar in the presence and absence of metabolic activation. Toxicity is detectable by (1) a decrease in the number of revertant colonies occurring per plate and/or (2) by a thinning or disappearance of the background bacterial lawn. Colonies are machine counted unless otherwise noted.

PRELIMINARY TOXICITY DETERMINATION
OF TEST ARTICLE

T2039-A1
Experiment I.D.

T2039.501
Study Number

Table 2

AT0214
Test Article Identification

Without S-9 Activation

Test Article Concentration µg/Plate	TA100 Revertants/ Plate	TA100 Background Bacterial Lawn*
H ₂ O 50 µl	89	1
0.0001	78	1
0.001	99	1
0.010	95	1
0.033	83	1
0.10	97	1
0.33	82	1
1.0	97	1
10	106	1
100	100	1
1,000	11	4

*Refer to background bacterial
lawn evaluation code key

Date Plated 6/30/83

Dilutions of the test article are plated with TA100 on selective agar in the presence and absence of metabolic activation. Toxicity is detectable by (1) a decrease in the number of revertant colonies occurring per plate and/or (2) by a thinning or disappearance of the background bacterial lawn. Colonies are machine counted unless otherwise noted.

Condition of the Background Bacterial Lawn

The condition of the background bacterial lawn is evaluated for each spontaneous/induced revertant plate, both macroscopically and microscopically by using a dissecting microscope. The evaluation is recorded using the following code:

BACTERIAL BACKGROUND LAWN EVALUATION CODES

Code	Definition	Characteristics
1 or blank	Normal	Distinguished by a healthy microcolony lawn.
2	Slightly Reduced	Distinguished by a noticeable thinning of the microcolony lawn and an increase in the size of the microcolonies compared to the solvent control plate.
3	Moderately Reduced	Distinguished by a marked thinning of the microcolony lawn and an increase in the size of the microcolonies compared to the solvent control plate.
4	Extremely Reduced	Distinguished by an extreme thinning of the microcolony lawn and an increase in the size of the microcolonies compared to the solvent control plate.
5	Absent	Distinguished by a complete lack of any microcolony background lawn.

Evidence of test article precipitate of the plates is recorded by addition of the following precipitate code to the code number used to evaluate the condition of the background bacterial lawn.

SP	Slight Precipitate	Distinguished by noticeable precipitate on the plate, however, the precipitate does not influence automated counting of the plate.
MP	Moderate Precipitate	Distinguished by a marked amount of precipitate on the plate, requiring the plate to be hand counted.
HP	Heavy Precipitate	Distinguished by a large amount of precipitate on the plate, making the required hand count difficult.

Thus, 3-MP would indicate a plate observed to have a moderately reduced background bacterial lawn with a marked amount of precipitate which required a hand count.

The results of the preliminary toxicity study of MA #T2039 indicate that the appropriate maximum dose level to be tested in the mutagenicity assay would be 600 µg per plate.

The results of the mutagenicity assay are presented in Tables 3 through 14. This data was generated in Experiments T2039-B2 through T2039-B4.

In Experiment T2039-B1, all mutagenicity plates were contaminated by bacteria which made accurate quantitation of histidine revertants impossible.

In Experiment T2039-B2, a small increase in TA98 revertants per plate and a doubling in the number of TA1537 revertants per plate was observed in the presence of rat liver microsomes. In order to confirm these observations, the test article was retested in Experiment T2039-B3 over an extended dose range in the presence of rat liver microsomes on TA98 and TA1537. The results with TA1537 are shown in Table 9. Due to the presence of an intermediate sized TA98 colony type that was present on the TA98 plates (this phenomenon has been observed in ours and other laboratories), it was not possible to accurately quantitate the TA98 revertants per plate. A three-fold increase in TA1537 revertants was observed at the 600 µg per plate dose level.

Although a two-fold and a three-fold increase in TA1537 revertants was observed in Experiments B2 and B3, due to the absence of a clear dose response, these results did not meet the criteria for a positive response as defined by the protocol used for this study.

In an attempt to further clarify the response observed on TA1537, the test article was tested on TA97, a recently developed strain that Ames has recommended to be used in place of TA1537 due to its greater sensitivity to some mutagens. In this experiment, TA98 and TA1537 were also used. The results of these studies are shown in Tables 11 through 14. Increases in revertants per plate were observed at the 500 and 600 µg per plate dose levels for all

three tester strains, TA97, TA98 and TA1537. The responses were less than two-fold on TA97 and TA98 and 2.5-fold on TA1537. Again however, none of the responses met the criteria of a positive response.

SALMONELLA MUTAGENICITY ASSAY

Table 3

AT0214

T2039.501

Study Number

Test Article Identification

T2039-B2 Experiment Number		Concentration (µg per plate)					
		Solvent Control H ₂ O 50 µl	6.0	30	150	300	600
Strain: TA98 Date Plated: 7/16/83 Cells Seeded: 1.0 x10 ⁸ Liver Microsomes: Rat Colonies Counted by: Hand <input checked="" type="checkbox"/> Machine <input type="checkbox"/>	*						
	Revertants per plate	32	34	37	29	27	37
		27	29	32	38	48	50
		36	30	28	30	32	36
Averaged Revertants Standard Deviation		32	31	32	32	36	41
		5	3	5	5	11	8

T2039-B2 Experiment Number		Concentration (µg per plate)					
		Solvent Control H ₂ O 50 µl	6.0	30	150	300	600
Strain: TA98 Date Plated: 7/16/83 Cells Seeded: 1.0 x10 ⁸ Liver Microsomes: None Colonies Counted by: Hand <input checked="" type="checkbox"/> Machine <input type="checkbox"/>	*						
	Revertants per plate	30	20	27	27	28	26
		17	23	20	21	22	24
		18	19	8	16	15	29
Averaged Revertants Standard Deviation		22	21	18	21	22	26
		7	2	10	6	7	3

*Background bacterial lawn evaluation code

Form No. MA-160

12/17/82

SALMONELLA MUTAGENICITY ASSAY

Table 4

AT0214

T2039.501

Study Number

Test Article Identification

T2039-B2		Concentration (µg per plate)					
Experiment Number							
Strain: TA100 Date Plated: 7/16/83 Cells Seeded: 0.8 x10 ⁸ Liver Microsomes: Rat Colonies Counted by: Hand <input type="checkbox"/> Machine <input checked="" type="checkbox"/>	*	Solvent Control H ₂ O 50 µl	6.0	30	150	300	600
	Revertants per plate	160	175	164	162	160	154
		140	163	155	168	204	173
		180	177	162	144	173	233
	Averaged Revertants Standard Deviation	160	172	160	158	179	187
		20	8	5	12	23	41

T2039-B2		Concentration (µg per plate)					
Experiment Number							
Strain: TA100 Date Plated: 7/16/83 Cells Seeded: 0.8 x10 ⁸ Liver Microsomes: None Colonies Counted by: Hand <input type="checkbox"/> Machine <input checked="" type="checkbox"/>	*	Solvent Control H ₂ O 50 µl	6.0	30	150	300	600
	Revertants per plate	129	136	129	136	185	134
		157	93	118	107	179	131
		122	130	139	135	158	102
	Averaged Revertants Standard Deviation	136	120	129	126	174	122
		19	23	11	16	14	18

*Background bacterial lawn evaluation code

Form No. MA-160

12/17/82

SALMONELLA MUTAGENICITY ASSAY

Table 5

AT0214

T2039.501

Study Number

Test Article Identification

T2039-B2		Solvent Control		Concentration (µg per plate)					
Experiment Number		H ₂ O		50 µl	6.0	30	150	300	600
Strain: <u>TA1535</u> Date Plated: <u>7/16/83</u> Cells Seeded: <u>0.7</u> x10 ⁸ Liver Microsomes: <u>Rat</u> Colonies Counted by: Hand <input checked="" type="checkbox"/> Machine <input type="checkbox"/>	*								
	Revertants	11			16	13	15	12	10
	per	16			13	11	14	7	16
	plate	15			9	13	11	14	7
Averaged									
Revertants		14			13	12	13	11	11
Standard									
Deviation		3			4	1	2	4	5

T2039-B2		Solvent Control		Concentration (µg per plate)					
Experiment Number		H ₂ O		50 µl	6.0	30	150	300	600
Strain: <u>TA1535</u> Date Plated: <u>7/16/83</u> Cells Seeded: <u>0.7</u> x10 ⁸ Liver Microsomes: <u>None</u> Colonies Counted by: Hand <input checked="" type="checkbox"/> Machine <input type="checkbox"/>	*								
	Revertants	16			14	20	31	30	9
	per	26			8	20	19	23	2
	plate	23			20	24	16	18	15
Averaged									
Revertants		22			14	21	22	24	13
Standard									
Deviation		5			6	2	8	6	4

*Background bacterial lawn evaluation code

Form No. MA-160
12/17/82

SALMONELLA MUTAGENICITY ASSAY

Table 6

AT0214

T2039.501

Study Number

Test Article Identification

T2039-B2 Experiment Number		Concentration (µg per plate)					
		Solvent Control H ₂ O 50 µl	6.0	30	150	300	600
Strain: <u>TA1537</u> Date Plated: <u>7/16/83</u> Cells Seeded: <u>0.8</u> x10 ⁸ Liver Microsomes: <u>Rat</u> Colonies Counted by: Hand <input checked="" type="checkbox"/> Machine <input type="checkbox"/>	*						
	Revertants per plate	8	3	7	8	10	16
		4	4	7	4	7	10
		7	8	8	8	8	14
Averaged Revertants Standard Deviation		6	5	7	7	8	13
		2	3	1	2	2	3

T2039-B2 Experiment Number		Concentration (µg per plate)					
		Solvent Control H ₂ O 50 µl	6.0	30	150	300	600
Strain: <u>TA1537</u> Date Plated: <u>7/16/83</u> Cells Seeded: <u>0.8</u> x10 ⁸ Liver Microsomes: <u>None</u> Colonies Counted by: Hand <input checked="" type="checkbox"/> Machine <input type="checkbox"/>	*						
	Revertants per plate	8	6	8	2	4	6
		7	2	4	3	9	8
		2	8	5	7	5	6
Averaged Revertants Standard Deviation		6	5	6	4	6	7
		3	3	2	3	3	1

SALMONELLA MUTAGENICITY ASSAY

Table 7

AT0214

Test Article Identification

T2039.501

Study Number

<u>T2039-B2</u> Experiment Number		Concentration (µg per plate)								
Strain: <u>TA1538</u> Date Plated: <u>7/16/83</u> Cells Seeded: <u>0.6</u> x10 ⁸ Liver Microsomes: <u> </u> Rat Colonies Counted by: Hand <input checked="" type="checkbox"/> Machine <input type="checkbox"/>	* Revertants per plate Averaged Revertants Standard Deviation	Solvent Control H ₂ O 50 µl	6.0	30	150	300	600			
		26	23	24	19	25	16	2		
		21	21	30	22	24	16	2		
		20	21	19	24	20	12			
		22	22	24	22	23	15			
		3	1	6	3	3	2			

<u>T2039-B2</u> Experiment Number		Concentration (µg per plate)						
Strain: <u>TA1538</u> Date Plated: <u>7/16/83</u> Cells Seeded: <u>0.6</u> x10 ⁶ Liver Microsomes: <u>None</u> Colonies Counted by: Hand <input checked="" type="checkbox"/> Machine <input type="checkbox"/>	* Revertants per plate Averaged Revertants Standard Deviation	Solvent Control H ₂ O 50 µl	6.0	30	150	300	600	
		11	11	7	10	14	2	
		12	16	13	12	10	8	
		13	14	17	13	14	10	
		12	14	12	12	13	8	
		1	3	5	2	2	3	

*Background bacterial lawn evaluation code

Form No. MA-160

12/17/82

SALMONELLA MUTAGENESIS ASSAY

Positive Controls

Table 8

T2039.501		T2039-B2		AT0214			
Study Number		Experiment Number		Test Article Identification			
Date Plated	Strain	Chemical	Concentration per plate	Metabolic Activation	Revertants/Plate	Averaged Revertants per plate	S.D.
7/16/83	TA98	2-Aminoanthracene	4.0 µg	Rat Liver	3062	2359 2789	354
7/16/83	TA98	2-Nitrofluorene	5.0 µg	None	781	817 870	45
7/16/83	TA100	2-Aminoanthracene	4.0 µg	Rat Liver	2371	2341 2292	40
7/16/83	TA100	Sodium Azide	5.0 µg	None	1427	1401 1429	16
7/16/83	TA1535	2-Aminoanthracene	4.0 µg	Rat Liver	212	185 192	14
7/16/83	TA1535	Sodium Azide	5.0 µg	None	1233	1306 1306	42
7/16/83	TA1537	2-Aminoanthracene	4.0 µg	Rat Liver	325	253 274	37
7/16/83	TA1537	9-Aminoacridine	75 µg	None	404	258 218	98
7/16/83	TA1538	2-Aminoanthracene	4.0 µg	Rat Liver	1952	2180 2025	116
7/16/83	TA1538	2-Nitrofluorene	5.0 µg	None	1450	1465 1413	27

Colonies were machine counted.

SALMONELLA MUTAGENICITY ASSAY

Table 9

AT0214
Test Article Identification

T2039.501

Study Number

Concentration (µg per plate)

Solvent
Control
H₂O
50 µl

T2039-B3
Experiment Number

		150	300	600	700	800	
Strain: <u>TA1537</u> Date Plated: <u>7/20/83</u> Cells Seeded: <u>1.1</u> x10 ⁸ Liver Microsomes: <u>Rat</u> Colonies Counted by: Hand <input checked="" type="checkbox"/> Machine <input type="checkbox"/>	*						
	Revertants per plate	3	7	2	2	3	
		5		12	7	9	
	Revertants per plate	5	5	2	2	3	
		7		12	6	12	
	Revertants per plate	5	10	2	2	7	
		9		11	5		
Averaged Revertants Standard Deviation		4	7	12	6	9	
		1	3	1	1	3	

Solvent
Control

Concentration (µg per plate)

Experiment Number

Strain: _____ Date Plated: _____ Cells Seeded: _____ x10 ⁸ Liver Microsomes: _____ Colonies Counted by: Hand <input type="checkbox"/> Machine <input type="checkbox"/>	*						
	Revertants per plate						
	Revertants per plate						
Averaged Revertants Standard Deviation							

*Background bacterial lawn evaluation code

Form No. MA-160

12/17/82

Table 11

T2039.501

Study Number

AT0214

Test Article Identification

		Solvent Control H ₂ O	Concentration ($\mu\text{g per plate}$)					
		50 μl	150	300	500	600	700	
T2039-B4	Experiment Number	*						
Strain: TA98					2	2	3	
Date Plated: 7/23/83		28	23	25	35	39	24	
Cells Seeded: 1.1×10^8					2	2	3	
Liver Microsomes: Rat		29	31	33	38	46	28	
Colonies Counted by:					2	2	3	
		29	28	29	39	35	27	
Averaged Revertants		29	27	29	37	40	26	
Standard Deviation		1	4	4	2	6	2	
Hand <input checked="" type="checkbox"/>								
Machine <input type="checkbox"/>								

[illegible]

Form No. MA-160

*Background bacterial lawn evaluation code

12/17/82

SALMONELLA MUTAGENICITY ASSAY

Table 12

AT0214

Test Article Identification

T2039.501

Study Number

Concentration (µg per plate)

Solvent Control

T2039-B4
Experiment Number

Strain: TA1537		Solvent Control		150		300		500		600		700	
Date Plated: 7/23/83		H ₂ O		50 µl		5		9		13		5	
Cells Seeded: 1.0 x10 ⁸		3						2		2		3	
Liver Microsomes: Rat								2		8		3	
Colonies Counted by:		3		7		11		11		8		8	
Hand <input checked="" type="checkbox"/>								2		2		3	
Machine <input type="checkbox"/>		6		6		6		9		8		3	
Averaged Revertants		4		7		7		10		10		5	
Standard Deviation		2		2		3		1		3		3	

Solvent Control

Concentration (µg per plate)

Experiment Number

Strain: _____		Solvent Control		150		300		500		600		700	
Date Plated: _____													
Cells Seeded: _____ x10 ⁸													
Liver Microsomes: _____													
Colonies Counted by:													
Hand <input type="checkbox"/>													
Machine <input type="checkbox"/>													
Averaged Revertants													
Standard Deviation													

SALMONELLA MUTAGENICITY ASSAY

Table 13

AT0214

T2039.501

Study Number

Test Article Identification

T2039-B4 Experiment Number		Concentration (µg per plate)						
		150	300	500	600	700		
Strain: TA97 Date Plated: 7/23/83 Cells Seeded: 0.5 x10 ⁸ Liver Microsomes: Rat Colonies Counted by: Hand <input type="checkbox"/> Machine <input checked="" type="checkbox"/>	*							
	Revertants per plate	84	105	117	144	104	98	
		96	99	93	125	121	95	
		88	101	80	120	114	102	
Averaged Revertants Standard Deviation		89	102	97	130	113	98	
		6	3	19	13	9	4	

Solvent Control H₂O 50 µl

Experiment Number

		Concentration (µg per plate)						
Strain: Date Plated: Cells Seeded: x10 ⁸ Liver Microsomes: Colonies Counted by: Hand <input type="checkbox"/> Machine <input type="checkbox"/>	*							
	Revertants per plate							
Averaged Revertants Standard Deviation								

Solvent Control

*Background bacterial lawn evaluation code

Form No. MA-160

12/17/82

Positive Controls

Table 14

[illegible]

Colonies were machine counted.

APPENDIX

PROTOCOL AMENDMENT

Date: July 28, 1983

Sponsor:

Sponsor's Test Article Designation: AT0214

Study No.: T2039.501

Protocol No.: SPGT501 112382

Protocol Title: Salmonella/Mammalian-Microsome Plate Incorporation
Mutagenicity Assay (Ames Test)

1. TA97 was used in addition to the five standard tester strains.

Reason for Amendment:

Ames has shown that TA97 is more sensitive to some mutagens than is TA1537.¹ In our attempt to clarify the equivocal response observed on TA1537, the Sponsor agreed to the suggestion of using TA97 in Experiment T2039-B4.

¹Levin, et al. A new Salmonella tester strain, TA97, for the detection of frameshift mutagens. Mutation Research 94:315-330, 1982.

APPROVAL:

Steve R. Haworth 7/28/03
Steve R. Haworth, Ph.D. Date
Study Director

Study Coordinator Ph.D. 9/5/83
Date

Catalog No. 82-501
SALMONELLA/MAMMALIAN-MICROSOME PLATE INCORPORATION
MUTAGENICITY ASSAY (AMES TEST)

1.0 PURPOSE

The purpose of this study is to evaluate the mutagenic potential of the test article (or its metabolites) based on its ability to induce back mutations at selected loci of several strains of Salmonella typhimurium in the presence and absence of exogenous metabolic activation.

2.0 TEST ARTICLE

2.1 Identification: AT0214

2.2 Analysis:

The sponsor will be directly responsible for determination and documentation of the analytical purity and composition of the test article (see attached Test Article Characterization form) and the stability of the dosing solutions.

3.0 SPONSOR

3.1 Name:

3.2 Address:

3.3 Authorized Representative:


4.0 TESTING FACILITY

4.1 Name: Division of Genetic Toxicology
Microbiological Associates

4.2 Address: 5221 River Road
Bethesda, Maryland 20816

4.3 Study Location: Rockville Laboratory

4.4 Study Director: Steve R. Haworth, Ph.D.

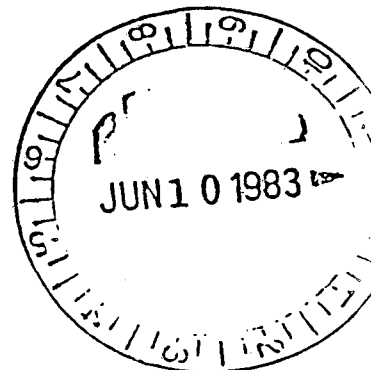

5.0 TEST SYSTEM

The Ames Test has been shown to be a sensitive, rapid, accurate indicator of the mutagenic activity of a wide range of chemical classes.

The tester strains to be used will be the Salmonella typhimurium histidine auxotrophs TA98, TA100, TA1535, TA1537 and TA1538 as described by Ames (Ames, et al., Mutation Research 31:347-364, 1975).

GENOTYPE OF THE TA STRAINS USED FOR MUTAGEN TESTING

Histidine mutation			Additional mutations		
<u>hisG46</u>	<u>hisC3076</u>	<u>hisD3052</u>	LPS	Repair	R factor
TA1535	TA1537	TA1538	<u>rfa</u>	<u>uvrB</u>	-
TA100		TA98	<u>rfa</u>	<u>uvrB</u>	+R

All of the tester strains contain, in addition to a mutation in the histidine operon, two additional mutations which enhance their sensitivity to some mutagenic compounds. The rfa mutation causes a loss of one of the enzymes responsible for the synthesis of part of the lipopolysaccharide layer of the cell wall. The resulting cell wall deficiency increases the permeability of the cell to certain classes of chemicals such as those containing large ring systems that would otherwise be excluded by a normal intact cell wall.

The second mutation is a deletion in the uvrB gene which results in a deficient DNA excision-repair system. This deficiency results in greatly enhanced sensitivity to some mutagens. Since the uvrB deletion extends through the bio gene, all of the tester strains containing this deletion also require the vitamin biotin for growth.

Finally, strains TA98 and TA100 also contain the pkM101 plasmid (carrying the R-factor) which further increases the sensitivity of these two strains to some mutagens. The mechanism by which this plasmid increases sensitivity to mutagens has been suggested to be due to its coding for an error-prone DNA repair polymerase.

TA98, TA1537 and TA1538 are reverted from histidine dependence (auxotrophy) to histidine independence (prototrophy)

by frame shift mutagens. TA100 and TA1535 are reverted by mutagens that cause base substitutions.

5.1 Source

Tester strains in use at Microbiological Associates were received directly from Dr. Bruce Ames, Department of Biochemistry, University of California, Berkeley.

5.2 Storage

All Frozen Permanent and Working Stocks of the tester strains will be stored in liquid nitrogen. Working Stocks will be prepared by growing a fresh overnight culture inoculated by a scrape of the Frozen Permanent Stock, adding DMSO (.09 ml/ml of culture) and freezing away small aliquots (0.1 - 0.2 ml) in glass vials.

5.3 Overnight Culture Preparation

Overnight cultures will be prepared by removing a Working Stock vial from the liquid nitrogen freezer and allowing it to thaw. A loopful of the thawed aliquot will be transferred to a baffled shake flask containing approximately 50 ml of culture media. The inoculated flask will be placed in a shaker/incubator at 37°C.

5.4 Harvesting of Cultures

All cultures will be harvested by monitoring optical density rather than by duration of incubation since overgrowth of cultures can cause loss of sensitivity to some mutagens. Cultures will be removed from incubation at a density of approximately $1-2 \times 10^9$ cells per ml.

5.5 Genotype Characterization

On the day of their use in the mutagenicity assay, all tester strain cultures will be checked for the following genetic markers:

5.5.1 The presence of the rfa wall mutation will be confirmed by demonstration of sensitivity to crystal violet.

5.5.2 The presence of the pkM101 plasmid will be confirmed for tester strains TA98 and TA100 by demonstration of resistance to Ampicillin.

5.5.3 Spontaneous reversion frequencies that are characteristic of the respective strains will be demonstrated by plating aliquots of the culture on selective media.

6.0 EXPERIMENTAL DESIGN

The test article will be tested at a minimum of five dose levels along with appropriate solvent and positive controls on tester strains TA98, TA100, TA1535, TA1537 and TA1538 with and without metabolic activation. Following an approximate 48 hour incubation at 37°C, revertant colonies per plate will be counted.

6.1 Dose Levels

Using TA100 as the indicator strain, each test article will be checked for toxicity up to a concentration of 10 mg/plate if solubility/miscibility permits. Test articles which exhibit limited solubility/miscibility will be tested for toxicity up to the maximum workable concentration attainable in the solvent of choice. The toxicity determination will be conducted both in the presence and absence of exogenous metabolic activation. An aliquot from each of at least eight dilutions of the test article will be plated with an overnight TA100 culture on selective minimal agar. Toxicity is detectable as a decrease in the number of revertant colonies occurring per plate and/or by a thinning or disappearance of the background bacterial lawn. The highest concentration of test article used in the subsequent mutagenicity assay will be that which gives a detectable reduction of revertants on the selective plates and/or a thinning or disappearance of the background bacterial lawn.

If no toxicity is observed, then the highest dose level used in the mutagenicity assay will be 10 mg/plate unless:

- 1) The test article exhibits limited solubility or is not uniformly dispersible in the solvent of choice.
- 2) The test article precipitates heavily in the top agar.
- 3) There is insufficient test article available to either demonstrate toxicity or achieve a maximum dose level of 10 mg/plate.
- 4) The study coordinator indicates an alternate top dose level.

6.2 Frequency and Route of Administration

The test system will be exposed to the test article via the plate incorporation methodology originally described by Ames (Ames, et al., Mutation Research 31:347-364, 1975). This methodology has been

shown to detect a wide range of classes of chemical mutagens. All dose levels of test article, solvent controls and positive controls will be plated in triplicate.

6.3 Exogenous Metabolic Activation

6.3.1 Liver Microsomal Enzymes - S-9 Homogenate

6.3.1.1 Homogenate Preparation

The preparation of the microsomal enzyme fraction will be carried out with sterile glassware and solutions at 0-4°C. Excised livers will be placed in approximately 20 ml of 0.15M KCl contained in a pre-weighed beaker. After the liver is weighed, it will be transferred to another beaker containing 3 volumes of 0.15M KCl (3 ml/g of wet liver) where it will be minced with sterile scissors. The minced liver will be homogenized and centrifuged at 9000 x g for 10 minutes. The supernatant (referred to by Ames as the S-9 fraction) will be decanted, and small aliquots will be distributed into freezing ampules which will be stored at $\leq -70^{\circ}\text{C}$.

6.3.1.2 S-9 Characterization

Each batch of S-9 homogenate will be characterized for its ability to metabolize the promutagens 7,12-dimethylbenzanthracene, and 2-aminoanthracene to mutagens as described by deSerres (deSerres, et al., Science 203:563-565, 1979).

6.3.1.3 Species, Strain, Sex, Inducer

Liver microsomal enzymes will be prepared from male Sprague-Dawley rats that have been injected with Aroclor 1254 at 500 mg/kg. The Aroclor will be diluted in corn oil to a concentration of 200 mg/ml. Five days after i.p. injection with the Aroclor, the rats will be sacrificed by decapitation, and their livers will be excised. The rats will be fasted for 12 hours immediately preceding sacrifice.

6.3.2 S-9 Mix

The S-9 mix will be prepared immediately prior to its use in any experimental procedure.

One ml of the microsomal enzyme reaction mixture (S-9 mix) which is added to the soft agar overlay will contain the following components:

H ₂ O	0.56 ml
1.00M NaH ₂ PO ₄ , pH 7.4	0.10 ml
0.20M MgCl ₂ /0.825M KCl	0.04 ml
0.04M G-6-P	0.10 ml
0.04M NADP	0.10 ml
S-9	0.10 ml
	<hr/> 1.00 ml

Each plate will receive 0.5 ml of the S-9 mix.

6.4 Controls

6.4.1 Positive Controls

All combinations of positive controls and tester strains plated concurrently with the assay are listed below:

<u>Strain</u>	<u>Activation</u>	<u>Positive Controls</u>	<u>Conc. per Plate</u>
TA98	+	2-aminoanthracene	4.0 ug
TA98	-	2-nitrofluorene	5.0 ug
TA100	+	2-aminoanthracene	4.0 ug
TA100	-	sodium azide	5.0 ug
TA1535	+	2-aminoanthracene	4.0 ug
TA1535	-	sodium azide	5.0 ug
TA1537	+	2-aminoanthracene	4.0 ug
TA1537	-	9-aminoacridine	75 ug
TA1538	+	2-aminoanthracene	4.0 ug
TA1538	-	2-nitrofluorene	5.0 ug

6.4.2 Solvent Controls

Appropriate solvent controls will be plated for all strains with and without metabolic activation. Solvents compatible with this test system in order of preference include but will not be limited to: Deionized distilled H₂O, dimethylsulfoxide (CAS #67-68-5),

acetone (CAS #67-64-1), and ethanol
(CAS #64-17-5).

6.4.3 Sterility Controls

6.4.3.1 The most concentrated test article dilution will be checked for sterility.

6.4.3.2 The S-9 mix will be checked for sterility.

6.4.4 Tester Strain Titters

Each tester strain titer will be determined by plating an appropriate dilution of each overnight culture on complete agar.

7.0 METHODS

7.1 Plating Procedures for the Mutagenicity Assay
The test article will be solubilized and serially diluted immediately before its use in the mutagenicity assay. S-9 mix will also be prepared immediately prior to its use in the mutagenicity assay.

At least five doses of the test article will be plated with the appropriate tester strains, both with and without metabolic activation.

Without metabolic activation, 50 ul of tester strain and 50 ul of solvent or test article will be added to 2.5 ml of molten selective top agar at 45°C. With metabolic activation, 50 ul of tester strain, 50 ul of solvent or test article solution and 0.5 ml of S-9 mix will be added to 2.0 ml of molten selective top agar at 45°C. After vortexing, the mixture will be overlayed onto the surface of 25 ml of minimal bottom agar. After the overlay has solidified, the plates will be inverted and incubated for approximately 48 hours at 37°C. When necessary, aliquots of other than 50 ul of test article/solvent will be plated.

7.2 Test System Identification

Each plate will be labeled using indelible ink with a code system which identifies the test article, test phase, dose level, strain and activation type as described in detail in Microbiological Associates' Microbial Mutagenesis Standard Operating Procedures.

7.3 Colony Counting

Revertant colonies for a given tester strain within a given test article dilution series will be counted

either entirely by automated colony counter or entirely by hand. Plates with sufficient test article precipitate to interfere with automated colony counting will be counted manually.

7.3.1 Background Bacterial Lawn Evaluation

The condition of the background bacterial lawn on plates in the assay will be evaluated for evidence of test article toxicity and precipitate. Evidence of toxicity will be scored relative to the solvent control plate and recorded along with the revertant count for that plate.

7.4 Analysis of Data

For all replicate platings, the mean revertants per plate and the standard deviation will be calculated.

8.0 EVALUATION OF TEST RESULTS

For a test article to be considered positive, it must cause at least a doubling in the mean revertants per plate of at least one tester strain. This increase in the mean number of revertants per plate must be accompanied by a dose response to increasing concentrations of the test article. In those cases where the observed dose-responsive increase in TA1537 or TA1538 revertants per plate is less than three-fold, the response must be reproducible.

9.0 CRITERIA FOR DETERMINATION OF A VALID TEST

The following criteria must be met for the assay to be considered valid:

9.1 Tester Strain Integrity

9.1.1 rfa Wall Mutation

In order to demonstrate the presence of the deep rough wall mutation, all tester strain cultures must exhibit sensitivity to crystal violet.

9.1.2 pkM101 Plasmid R-factor

In order to demonstrate the presence of the pkM101 plasmid R-factor, tester strain cultures of TA98 and TA100 must exhibit resistance to Ampicillin.

9.1.3 Characteristic Number of Spontaneous Revertants

All tester strain cultures must exhibit a characteristic number of spontaneous revertants

per plate. The acceptable ranges are as follows:

TA98	10 - 50
TA100	80 - 240
TA1535	5 - 45
TA1537	3 - 21
TA1538	5 - 35

9.1.4 Tester Strain Titers

In order to ensure that appropriate numbers of bacteria are plated, tester strain culture titers must be greater than 1×10^9 but less than 4×10^9 .

9.1.5 Positive Control Values

Positive control values must exhibit at least a three fold increase in the number of revertants per plate over the average value for the solvent control for the respective strain.

9.2 Toxicity

9.2.1 Minimum Number of Dose Levels

A minimum of three non-toxic dose levels are required to evaluate assay data.

10.0 FINAL REPORT

A report of the results of this study will be prepared by the Testing Laboratory and will accurately describe all methods used for generation and analysis of data.

Results of the preliminary toxicity determinations will be presented which will include the number of revertants per plate and a background bacterial lawn evaluation for each dose level.

Results presented for the mutagenicity assay will include the number of revertants per plate with a corresponding background bacterial lawn evaluation, along with a mean and standard deviation for all replicate platings.

11.0 RECORD AND TEST ARTICLE ARCHIVES

11.1 Records

Upon completion of the final report, all raw data and reports will be maintained by the Regulatory Affairs Unit of Microbiological Associates in accordance with the Terms and Conditions.

11.2 Test Article

A sample of the Test Article will be held in storage in accordance with the Terms and Conditions.

12.0 GOOD LABORATORY PRACTICES

This study will be performed in compliance with the provisions of the Good Laboratory Practice Regulations for Nonclinical Laboratory Studies.

Will this study be submitted to a regulatory agency? No
If so, to which agency or agencies? _____

Does the sponsor request that samples of the Test Article dosing solutions be returned? No

13.0 SCHEDULE OF EVENTS

13.1 Proposed Initiation Date: SRH 7/28/83
6/29/83 6/30/83

13.2 Scheduled Completion Date: 7/29/83

14.0 REFERENCES

Ames, B.N., McCann, J., and Yamasaki, E. Methods for detecting carcinogens and mutagens with the Salmonella/Mammalian-Microsome Mutagenicity test. Mutation Research 31:347-364, 1975.

deSerres, et al., The Salmonella Mutagenicity Assay: Recommendations, Science 203:563-565, 1979.

SPONSOR'S AUTHORIZED REPRESENTATIVE

6/1/83

DATE PROTOCOL APPROVED BY SPONSOR

Steve R. Newirth
STUDY DIRECTOR

6/15/83
DATE